



Wiring Diagram

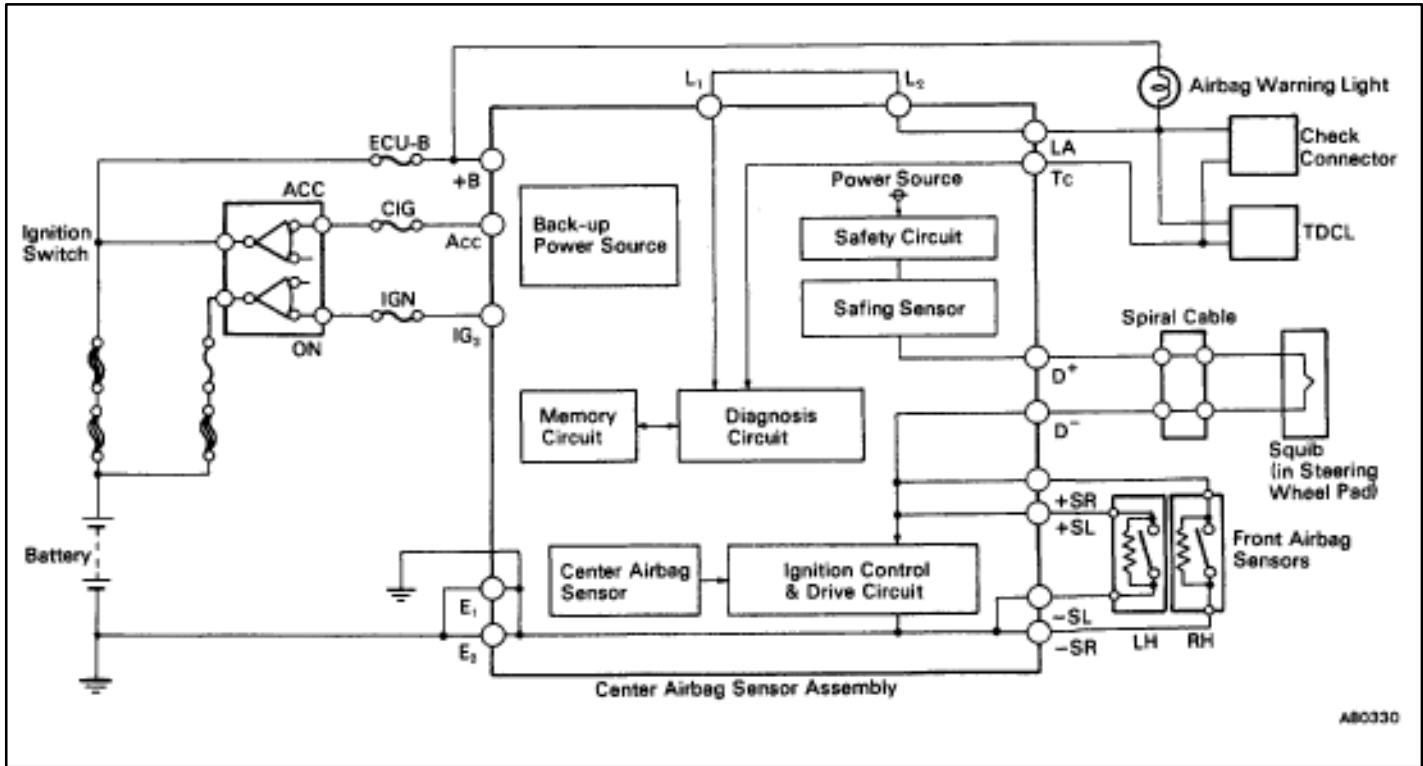

CENTER AIRBAG SENSOR ASSEMBLY CONNECTOR

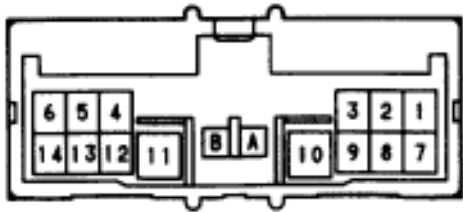

AB0050

No.	Symbol	Terminal Name	No.	Symbol	Terminal Name
1			8	E ₂	Ground
2	-SR	RH Front Airbag Sensor (-)	9	LA	Airbag Warning Light
3	+SR	RH Front Airbag Sensor (+)	10	D ⁻	Squib (-)
4	+SL	LH Front Airbag Sensor (+)	11	D ⁺	Squib (+)
5	-SL	LH Front Airbag Sensor (-)	12	Tc	Diagnosis
6	+B	Battery (ECU-B Fuse)	13	E ₁	Ground
7	IG ₂	Power Source (IGN Fuse)	14	Acc	Power Source (CIG Fuse)
A	L1	Electrical Connection Check Mechanism	B	L ₂	Electrical Connection Check Mechanism