



A/C CONTROL ASSEMBLY (A/C ECU) REMOVAL OF A/C CONTROL ASSEMBLY

1. **REMOVE RADIO AND A/C CONTROL ASSEMBLY**
See page [BO-112](#)
2. **REMOVE A/C CONTROL ASSEMBLY**
Remove four screws and the A/C control assembly.

INSPECTION OF A/C CONTROL ASSEMBLY

Judge whether the system is satisfactory or not based on the "Troubleshooting" procedure on page AC-

INSTALLATION OF A/C CONTROL ASSEMBLY

1. **INSTALL A/C CONTROL ASSEMBLY TO RADIO**
Install the A/C control assembly to the radio with four screws.
2. **INSTALL RADIO AND A/C CONTROL ASSEMBLY**
See page [BO-112](#)