

A/C UNIT

REMOVAL OF A/C UNIT

1. RECOVER REFRIGERANT IN SYSTEM


See page [AC-16](#)

2. REMOVE ENGINE

See page [EM-118](#)

3. REMOVE WATER VALVE


See page [AC-129](#)

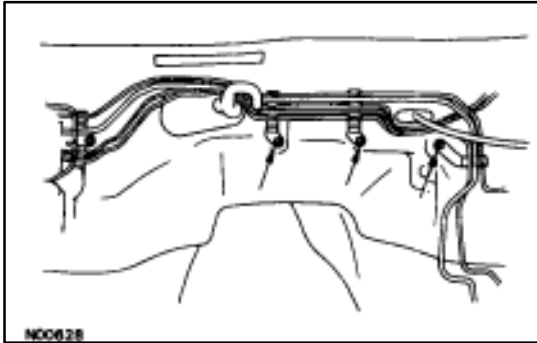

4. REMOVE BRAKE TUBES BRACKET MOUNTING BOLTS FROM DASH PANEL

5. REMOVE EVAPORATOR

See page [AC-124](#)

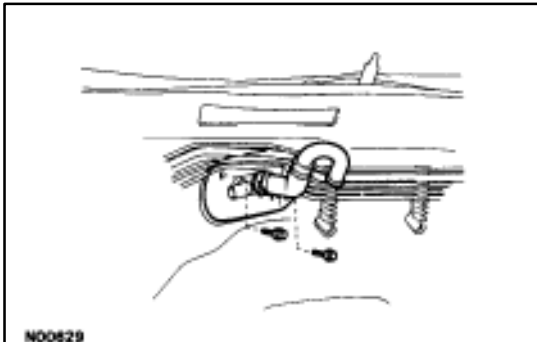

6. REMOVE WATER HOSE FROM HEATER RADIATOR

7. REMOVE INSULATOR RETAINER


Remove the two bolts and the retainer.

8. REMOVE INSTRUMENT PANEL REINFORCEMENT

See page [BO-109](#)


9. REMOVE FLOOR CARPET

See page [BO-118](#)

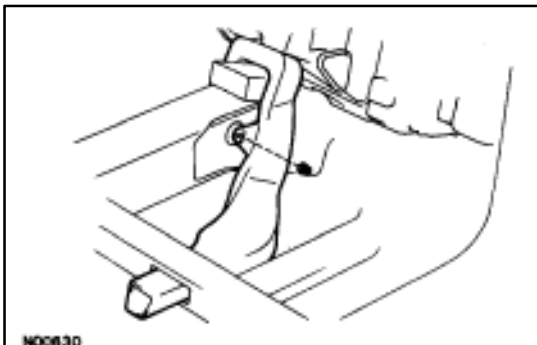


10. REMOVE REAR AIR DUCTS

Remove the nut and the air duct.

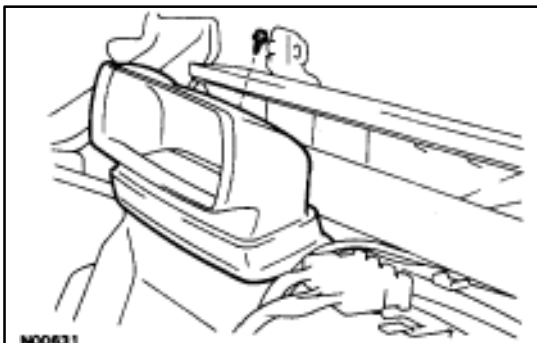

11. REMOVE HEATER TO RESISTER NO. 3 DUCT

Remove the screw and the duct.


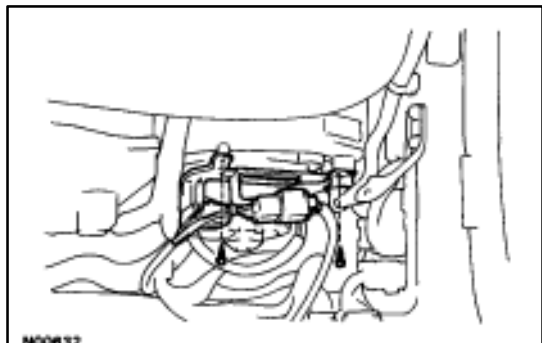


12. REMOVE CONNECTOR BRACKET FROM UNDER SIDE OF BLOWER MOTOR

Remove the two screws and the bracket.

13. REMOVE A/C UNIT

- (b) Remove the six bolts and the A/C unit.
- (a) Disconnect connectors from the unit.

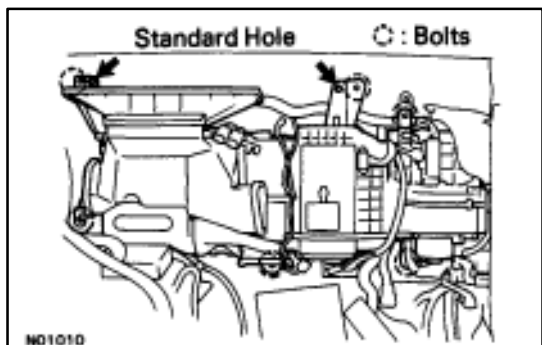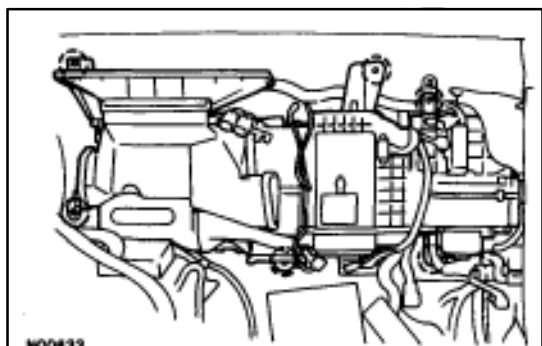

INSTALLATION OF A/C UNIT


1. INSTALL A/C UNIT

- (a) Match the standard holes of the A/C unit with those on the vehicle.

HINT:

- Pull the drain hose of the A/C unit forward until the yellow paint on the hose is visible in the engine compartment.
- Insert the drain hose into the engine compartment hose until the match marks are aligned.

- (b) Tighten six bolts.

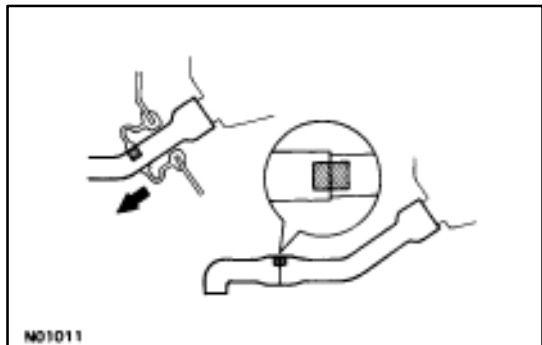

2. INSTALL CONNECTOR BRACKET

3. INSTALL HEATER TO RESISTER NO. 3 DUCT

4. INSTALL REAR AIR DUCTS

5. INSTALL FLOOR CARPET

6. INSTALL INSULATOR RETAINER

7. INSTALL WATER HOSE TO HEATER RADIATOR

8. INSTALL BRAKE TUBE BRACKET MOUNTING BOLTS

9. INSTALL WATER VALVE

See page [AC-129](#)

9. INSTALL EVAPORATOR

See page [AC-126](#)

10. INSTALL INSTRUMENT PANEL REINFORCEMENT**11. INSTALL ENGINE**

See page [EM-167](#)

12. EVACUATE AIR IN REFRIGERATION SYSTEM AND CHARGE WITH REFRIGERANT

See page [AC-17](#)

Specified amount: 950 ± 50 g (33.44 ± 1.76 oz)

13. INSPECT FOR LEAKAGE OF REFRIGERANT

Using a gas leak tester, check for leakage of refrigerant.