


AIR INLET SERVOMOTOR

REMOVAL OF AIR INLET SERVOMOTOR

1. REMOVE INSTRUMENT PANEL REINFORCEMENT

See page [BO-109](#)

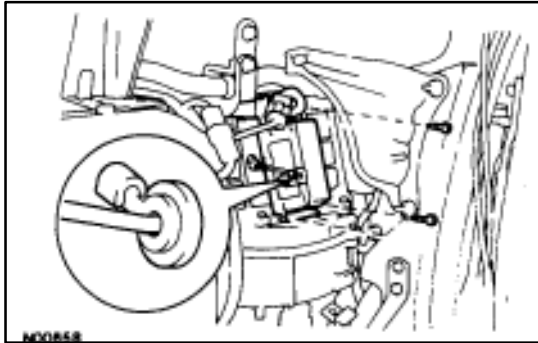

2. REMOVE SERVOMOTOR

- (a) Disconnect the connector.
- (b) Disconnect the control link.
- (c) Remove the three screws and the servomotor.

INSPECTION OF AIR INLET SERVOMOTOR

See page [AC-64](#)

AIR INLET SERVOMOTOR INSTALLATION

1. INSTALL SERVOMOTOR

- (a) Install the servomotor with three screws.
- (b) Connect the control link.
- (c) Connect the connector.

2. INSTALL INSTRUMENT PANEL REINFORCEMENT

See page [BO-109](#)