

AIR OUTLET SERVOMOTOR REMOVAL OF AIR OUTLET SERVOMOTOR


1. **REMOVE INSTRUMENT PANEL REINFORCEMENT**
See page [BO-109](#)
2. **REMOVE SERVOMOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the four screws and the servomotor.

INSPECTION OF AIR OUTLET SERVOMOTOR

See page [AC-68](#)

INSTALLATION OF AIR OUTLET SERVOMOTOR

1. **INSTALL SERVOMOTOR**
 - (a) Install the servomotor with four screws.
 - (b) Connect the connector.
2. **INSTALL INSTRUMENT PANEL REINFORCEMENT**
See page [BO-109](#)

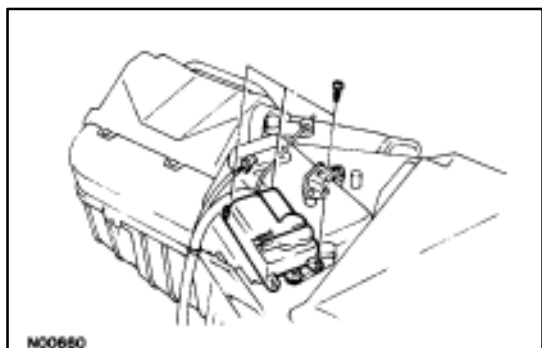

AIR MIX SERVOMOTOR REMOVAL OF AIR MIX SERVOMOTOR

1. **REMOVE A/C UNIT**
See page [AC-109](#)
2. **REMOVE SERVOMOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the three screws and the servomotor.

INSPECTION OF AIR MIX SERVOMOTOR

See page [AC-60](#)

INSTALLATION OF AIR MIX SERVOMOTOR

1. **INSTALL SERVOMOTOR**
 - (a) Install the servomotor with three screws.
 - (b) Connect the connector.
2. **INSTALL A/C UNIT**
See page [AC-110](#)