


AMBIENT TEMPERATURE SENSOR REMOVAL OF AMBIENT TEMPERATURE SENSOR

1. REMOVE ENGINE UNDER COVER

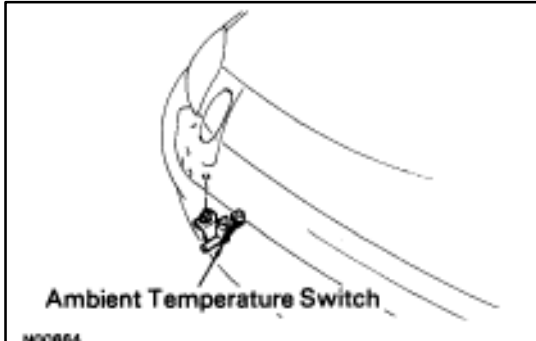

2. REMOVE SENSOR

- (a) Remove the clip and the sensor.
- (b) Disconnect the connector.

INSPECTION OF AMBIENT TEMPERATURE SENSOR

See page [AC-46](#)

INSTALLATION OF AMBIENT TEMPERATURE SENSOR

1. INSTALL SENSOR

- (a) Connect the connector.
- (b) Install the sensor with the clip.

2. INSTALL ENGINE UNDER COVER