

BLOWER MOTOR


REMOVAL OF BLOWER MOTOR

1. REMOVE GLOVE BOX

See page [BO-112](#)


2. REMOVE ECU COVER

- (a) Lift up the front end of the carpet on the passenger side.
- (b) Remove the two nuts and the cover.

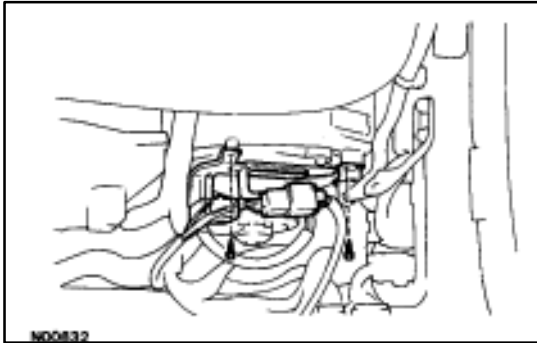

3. REMOVE CONNECTOR BRACKET

Remove the two screws and the bracket.

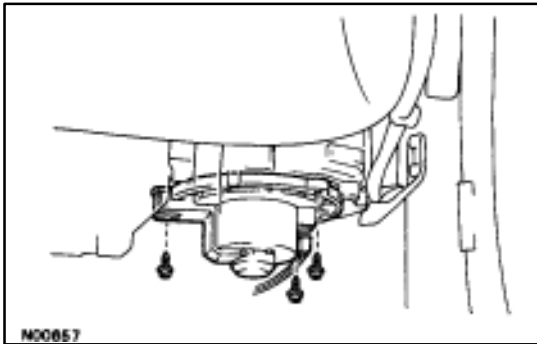

4. REMOVE MOTOR

- (a) Disconnect the connector.
- (b) Remove the three screws and the motor.

INSPECTION OF BLOWER MOTOR

See page [AC-81](#)

INSTALLATION OF BLOWER MOTOR

1. INSTALL MOTOR

- (a) Install the motor with three screws.
- (b) Connect the connector.

2. INSTALL CONNECTOR BRACKET

3. INSTALL ECU COVER

4. INSTALL GLOVE BOX

