

## BLOWER RESISTOR

### REMOVAL OF BLOWER RESISTOR


1. **REMOVE GLOVE BOX**  
See page [BO-112](#)
2. **REMOVE RESISTOR**
  - (a) Disconnect the connector.
  - (b) Remove the two screws and the resistor.

### INSPECTION OF BLOWER RESISTOR

See page [AC-80](#)

### INSTALLATION OF BLOWER RESISTOR

1. **INSTALL RESISTOR**
  - (a) Install the resistor with two screws.
  - (b) Connect the connector.
2. **INSTALL GLOVE BOX**  
See page [BO-112](#)

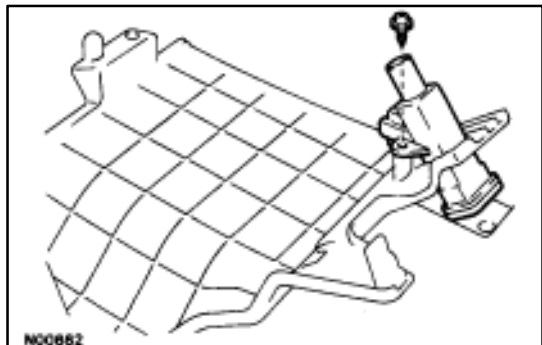

## ROOM TEMPERATURE SENSOR

### REMOVAL OF ROOM TEMPERATURE SENSOR

1. **REMOVE NO. 1 LOWER FINISH PANEL**  
See page [BO-112](#)
2. **REMOVE SENSOR**  
Remove the screw and the sensor.

### INSPECTION OF ROOM TEMPERATURE SENSOR

See page [AC-44](#)

### INSTALLATION OF ROOM TEMPERATURE SENSOR

1. **INSTALL SENSOR**  
Install the sensor with one screw.
2. **INSTALL NO. 1 LOWER FINISH PANEL**  
See page [BO-112](#)