

## SOLAR SENSOR

### REMOVAL OF SOLAR SENSOR


1. REMOVE NO. 1 DEFROSTER GARNISH  
See page [BO-109](#)
2. REMOVE SENSOR  
Push out the sensor from the garnish.

### INSPECTION OF SOLAR SENSOR

See page [AC-52](#)

### INSTALLATION OF SOLAR SENSOR

1. INSTALL SENSOR TO NO. 1 DEFROSTER GARNISH
2. INSTALL NO. 2 DEFROSTER GARNISH  
See page [BO-109](#)

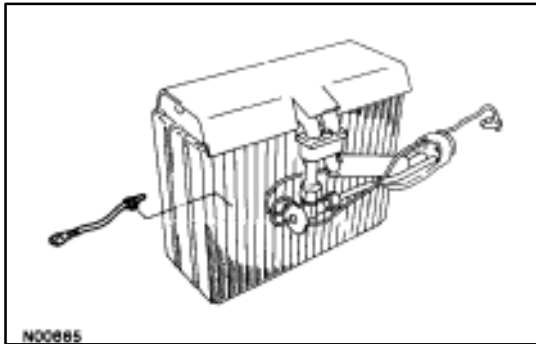

## EVAPORATOR TEMPERATURE SENSOR

### REMOVAL OF EVAPORATOR TEMPERATURE SENSOR

1. REMOVE EVAPORATOR  
See page [AC-124](#)
2. REMOVE SENSOR FROM EVAPORATOR

### INSPECTION OF EVAPORATOR TEMPERATURE SENSOR

See page [AC-48](#)

### INSTATION OF EVAPORATOR TEMPERATURE SENSOR

1. INSTALL SENSOR TO EVAPORATOR
2. INSTALL EVAPORATOR  
See page [AC-126](#)