



## HEATER RADIATOR

### REMOVAL OF HEATER RADIATOR

1. SET TEMPERATURE CONTROL SWITCH TO MAX COOL
2. REMOVE A/C UNIT  
See page [AC-109](#)
3. REMOVE HATER RADIATOR
  - (a) Remove the two screws and the plate.
  - (b) Remove the two screws and the clamps.
  - (c) Pull the radiator out.

## INSPECTION OF HEATER RADIATOR

### INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

## INSTALLATION OF HEATER RADIATOR

1. INSTALL HEATER RADIATOR TO A/C UNIT
  - (a) Put the radiator in the A/C until.
  - (b) Install the clamps with two screws.
  - (c) Install the plate with two screws.
2. INSTALL A/C UNIT  
See page [AC-110](#)