


DRIVE BELT TENSION

INSPECTION OF DRIVE BELT TENSION

- 1. **INSPECT DRIVE BELT’S INSTALLATION CONDITION**
Check that the drive belt fits properly in the ribbed grooves.

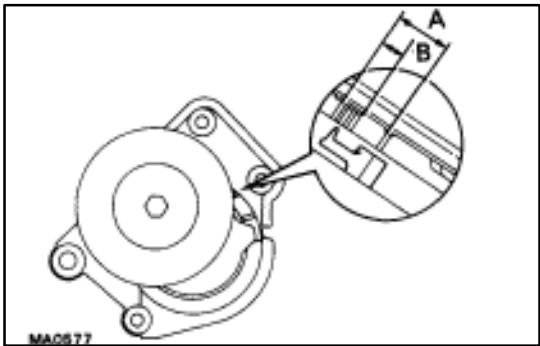

- 2. **INSPECT DRIVE BELT TENSION**
Check that the tension is within the A range on the auto tensioner scale.
If the tension is not within the A range on the scale, replace the belt with a new one.
HINT: When replacing the drive belt with a new one, the belt’s tension should be within the B range on the belt tensioner scale.

IDLE-UP SPEED

INSPECTION OF IDLE SPEED

- 1. **WARM UP ENGINE**
- 2. **INSPECT IDLE SPEED**

Magnetic clutch condition	Standard idle speed (rpm)
No engaged	Approx. 700 rpm
Engaged	Approx. 700 rpm