

## INSTALLATION OF PRESSURE SWITCH

### 1. INSTALL PRESSURE SWITCH

(a) Install the pressure switch to the liquid tube.

**Specified torque:** 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT: Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and install the switch.

(b) Connect the connector.

### 2. EVACUATE AIR IN REFRIGERATION SYSTEM AND CHARGE WITH REFRIGERANT


See page [AC-17](#)

**Specified amount:** 950 ± 50 g (33.44 ± 1.76 oz)

### 3. INSPECTION FOR LEAKAGE OF REFRIGERANT

Using a gas leak tester, check for leakage of refrigerant from the pressure switch mount.

### 4. INSPECT A/C OPERATION

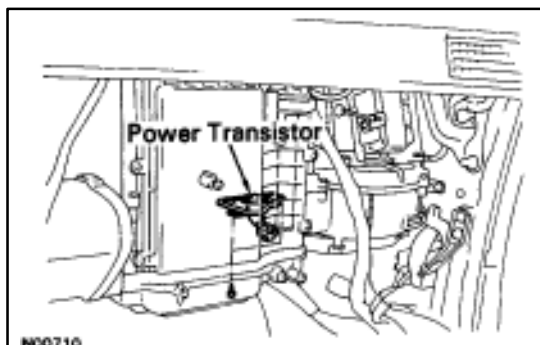

## POWER TRANSISTOR REMOVAL OF POWER TRANSISTOR

### 1. REMOVE GLOVE BOX

### 2. REMOVE POWER TRANSISTOR

(a) Disconnect connectors.

(b) Remove the two screws and the power transistor.

## INSPECTION OF POWER TRANSISTOR

See page [AC-79](#)

## INSTALLATION OF POWER TRANSISTOR

### 1. INSTALL POWER TRANSISTOR

(a) Install power transistor with two screws.

(b) Connect connectors.

### 2. INSTALL GLOVE BOX

See page [BO-112](#)