



## RECOVERING OF REFRIGERANT IN REFRIGERANT SYSTEM

When discharging refrigerant from the system as follows, use a recovery machine to recover the refrigerant.

Before replacing parts on the refrigerant line.

When moisture or air gets in the refrigerant line.

When excess refrigerant is charged.

### NOTICE:

- When handling the recovery machine, always follow the directions given in instruction manual.
- After recovery, the amount of compressor oil removed must be measured and same amount added into the system.

### 1. INSTALL MANIFOLD GAUGE SET TO SERVICE VALVES

See page [AC-15](#)

### 2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

- (a) Connect the center hose to recovery machine.
- (b) Operate the recovery machine.
- (c) Open both high and low hand valves of manifold gauge set.

### 3. STOP RECOVERY MACHINE WHEN RECOVERING HAS FINISHED

### 4. REMOVE MANIFOLD GAUGE SET FROM SERVICE VALVES

See page [AC-15](#)

