

REVOLUTION DETECTING SENSOR INSPECTION OF REVOLUTION DETECTING SENSOR

See page [AC-55](#)


REMOVAL OF REVOLUTION DETECTING SENSOR

1. REMOVE COMPRESSOR

See page [AC-113](#)

2. REMOVE SENSOR

Remove the two bolts and the sensor.

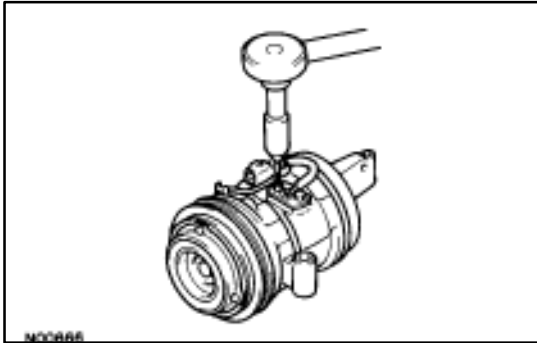

INSTALLATION OF REVOLUTION DETECTING SENSOR

1. INSTALL SENSOR

Using a torque wrench, tighten the bolts.

Specified Torque: 6 N·m (60 kgf·cm, 4 ft·lbf)

2. INSTALL COMPRESSOR

See page [AC-119](#)