

BLOWER RESISTOR

REMOVAL OF BLOWER RESISTOR


1. **REMOVE GLOVE BOX**
See page [BO-112](#)
2. **REMOVE RESISTOR**
 - (a) Disconnect the connector.
 - (b) Remove the two screws and the resistor.

INSPECTION OF BLOWER RESISTOR

See page [AC-80](#)

INSTALLATION OF BLOWER RESISTOR

1. **INSTALL RESISTOR**
 - (a) Install the resistor with two screws.
 - (b) Connect the connector.
2. **INSTALL GLOVE BOX**
See page [BO-112](#)

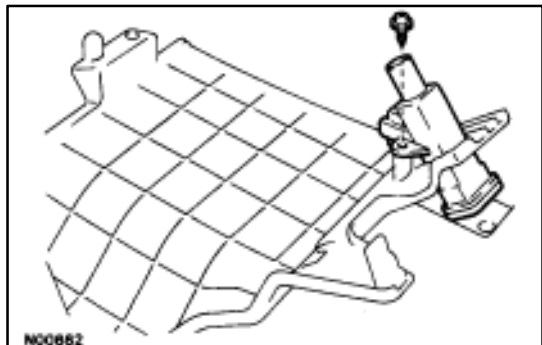

ROOM TEMPERATURE SENSOR

REMOVAL OF ROOM TEMPERATURE SENSOR

1. **REMOVE NO. 1 LOWER FINISH PANEL**
See page [BO-112](#)
2. **REMOVE SENSOR**
Remove the screw and the sensor.

INSPECTION OF ROOM TEMPERATURE SENSOR

See page [AC-44](#)

INSTALLATION OF ROOM TEMPERATURE SENSOR

1. **INSTALL SENSOR**
Install the sensor with one screw.
2. **INSTALL NO. 1 LOWER FINISH PANEL**
See page [BO-112](#)