

SOLAR SENSOR

REMOVAL OF SOLAR SENSOR


1. REMOVE NO. 1 DEFROSTER GARNISH
See page [BO-109](#)
2. REMOVE SENSOR
Push out the sensor from the garnish.

INSPECTION OF SOLAR SENSOR

See page [AC-52](#)

INSTALLATION OF SOLAR SENSOR

1. INSTALL SENSOR TO NO. 1 DEFROSTER GARNISH
2. INSTALL NO. 2 DEFROSTER GARNISH
See page [BO-109](#)

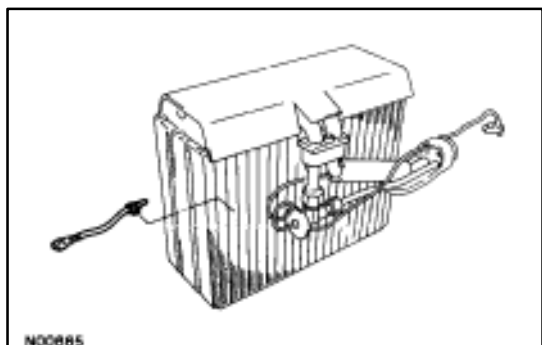

EVAPORATOR TEMPERATURE SENSOR

REMOVAL OF EVAPORATOR TEMPERATURE SENSOR

1. REMOVE EVAPORATOR
See page [AC-124](#)
2. REMOVE SENSOR FROM EVAPORATOR

INSPECTION OF EVAPORATOR TEMPERATURE SENSOR

See page [AC-48](#)

INSTATION OF EVAPORATOR TEMPERATURE SENSOR

1. INSTALL SENSOR TO EVAPORATOR
2. INSTALL EVAPORATOR
See page [AC-126](#)