


## TERMINALS OF ECU

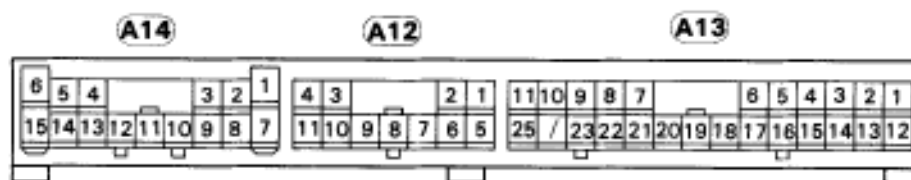

BE6351

Terminal No.	Symbol	Connection/Terminal Name	Terminal No.	Symbol	Connection/Terminal Name
A14-1	+B	Back-up Power Source	A13-1	IGN	No. 1 Igniter
A14-2	MH	Air Mix Servomotor	A13-2	A/C IN	Compressor
A14-3	MC	Air Mix Servomotor	A13-3	LCK I	Lock Sensor
A14-4	MFRS	Air Inlet Servomotor	A13-4	SAUTO	Temperature and Automatic Control Switch
A14-5	MREC	Air Inlet Servomotor	A13-5	LP	Pressure Switch
A14-6	IG+	ECU Power Source	A13-6	DIN	TDCL, Check Connector
A14-7	E	ECU Ground	A13-7	TR	Room Temp. Sensor
A14-8	MFACE	Air Outlet Servomotor	A13-8	TAM	Ambient Temp. Sensor
A14-9	MDEF	Air Outlet Servomotor	A13-9	TE	Evaporator Temp. Sensor
A14-10	—	—	A13-10	TW	Water Temp. Sensor
A14-11	—	—	A13-11	TS	Solar Sensor
A14-12	—	—	A13-12	SET1	Temperature and Automatic Control Switch
A14-13	—	—	A13-13	SET2	Temperature and Automatic Control Switch
A14-14	—	—	A13-14	SET3	Temperature and Automatic Control Switch
A14-15	ACC	Power Source	A13-154	SET4	Temperature and Automatic Control Switch
A12-1	—	—	A13-16	SET5	Temperature and Automatic Control Switch
A12-2	REOST	Rheostat	A13-17	DOUT	TDCL
A12-3	WV	Water Valve VSV	A13-18	S5	Sensor Power Source
A12-4	MGC	Engine & ECT ECU	A13-19	—	—
A12-5	TC	Rheostat	A13-20	SG	Sensor Ground
A12-6	Tail	Taillight Relay	A13-21	—	—
A12-7	LV	Power Transistor	A13-22	TP	Air Mix Damper Position Sensor
A12-8	BLR	Power Transistor	A13-23	TPI	Air Mix Damper Position Sensor
A12-9	HR	Heater Relay	A13-24	—	—
A12-10	RDFGR	Defogger Relay	A13-25	TPM	Air Outlet Damper Position Sensor
A12-11	FAN	Cooling Fan ECU	—	—	—