

WATER TEMPERATURE SENSOR REMOVAL OF WATER TEMPERATURE SENSOR

1. **REMOVE A/C UNIT**
See page [AC-109](#)
2. **REMOVE SENSOR**
After taking off the clamp, take out the sensor.

INSPECTION OF WATER TEMPERATURE SENSOR


See page [AC-51](#)

INSTALLATION OF WATER TEMPERATURE SENSOR

1. **INSTALL SENSOR TO A/C UNIT**
Install the sensor with the clamp.
2. **INSTALL A/C UNIT**
See page [AC-110](#)

PRESSURE SWITCH INSPECTION OF PRESSURE SWITCH

See page [AC-57](#)

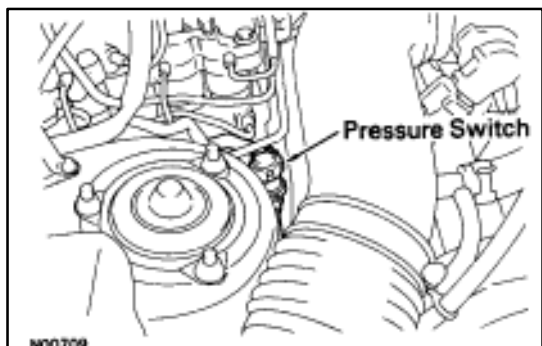

REMOVAL OF PRESSURE SWITCH

1. **RECOVER REFRIGERANT IN REFRIGERANT SYSTEM**
See page [AC-16](#)
2. **REMOVE PRESSURE SWITCH**
 - (a) Disconnect the connector.
 - (b) Remove the pressure switch from the liquid tube.
HINT: Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.