


## WATER VALVE

### REMOVAL OF WATER VALVE

#### 1. DISCONNECT FOLLOWING PARTS FROM WATER VALVE


- Water hose
- Vacuum hose
- Connector

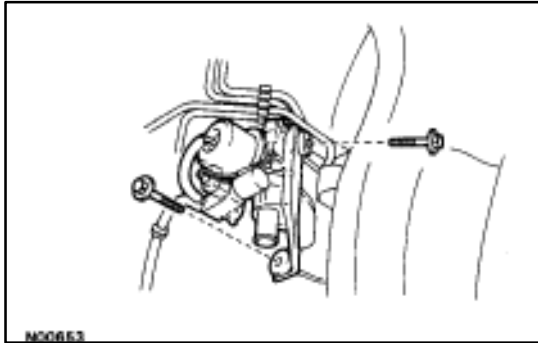

#### 2. REMOVE WATER VALVE


- (a) Remove the two bolts.

- (b) Loosen the hose band, then pull off the water hose.

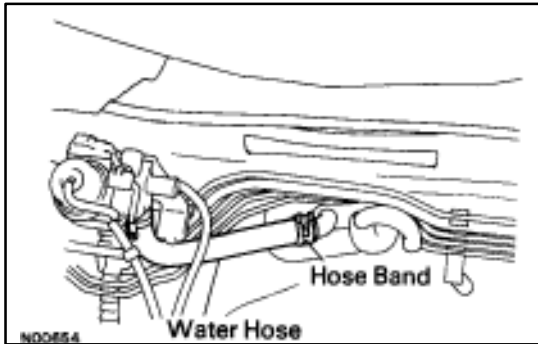

### INSPECTION OF WATER VALVE VSV


See page [AC-90](#)

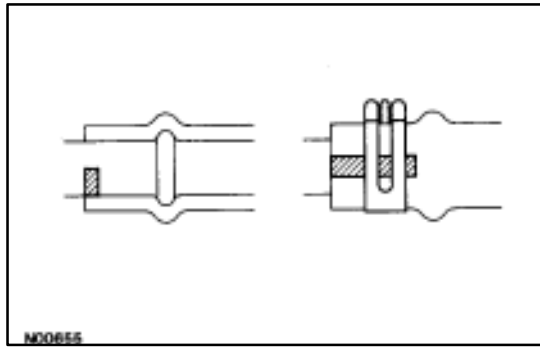

## INSTALLATION OF WATER VALVE

### 1. INSTALL WATER VALVE

- Push the water hose for the heater unit onto the pipe until the pipe's markings are hidden.
- Install the hose clip in a position where about 1 mm (0.039 in.) of the marking on the hose can be seen.
- Install the water valve with two screws.

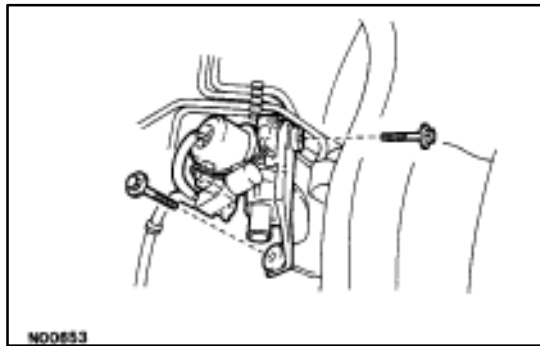

### 2. INSTALL FOLLOWING PARTS TO WATER VALVE

- Connector
- Vacuum hose
- Water hose

#### HINT:

- Push the water hose onto the water valve pipe until the pipe is completely hidden.
- Install the hose clip in a position where about 1 mm (0.039 in.) of the marking on the hose can be seen.

