



## Neutral Start Switch

### REPLACEMENT OF NEUTRAL START SWITCH

1. REMOVE FRONT EXHAUST PIPE  
(See pages EX-3 and EX-4)

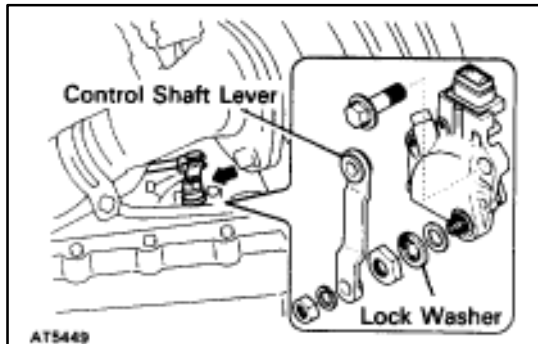

2. DISCONNECT NEUTRAL START SWITCH CONNECTOR
3. REMOVE NEUTRAL START SWITCH
  - (a) Remove the control shaft lever.
  - (b) Pry off the lock washer and remove the nut.
  - (c) Remove the bolt and pull out the neutral start switch.
4. INSPECT NEUTRAL START SWITCH  
(See page [AT-100](#))
5. INSTALL AND ADJUST NEUTRAL START SWITCH  
(See page [AT-51](#))
6. CONNECT NEUTRAL START SWITCH CONNECTOR
7. INSTALL FRONT EXHAUST PIPE  
(See page EX-4)

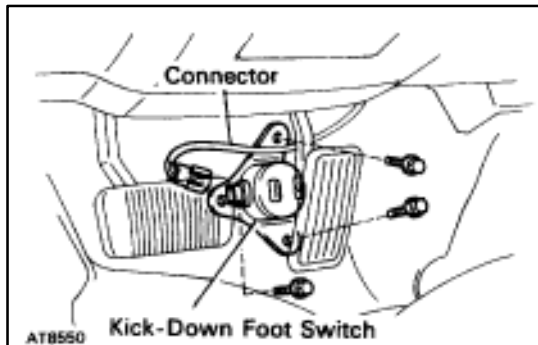

## Kick-Down Switch

1. REMOVAL OF KICK-DOWN SWITCH
  - (a) Remove the three bolts and kick-down switch.
  - (b) Disconnect the kick-down switch connector.
2. INSPECTION OF KICK-DOWN SWITCH  
(See page [AT-98](#))
3. INSTALLATION OF KICK-DOWN SWITCH
  - (a) Connect the kick-down switch connector.
  - (b) Install the kick-down switch and three bolts.