



Neutral Start Switch

REPLACEMENT OF NEUTRAL START SWITCH

1. REMOVE FRONT EXHAUST PIPE
(See pages [EX-3](#) and 4)

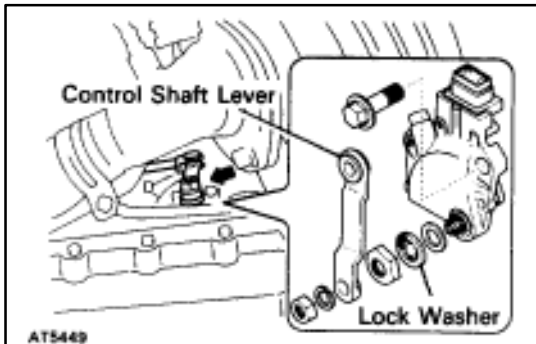

2. DISCONNECT NEUTRAL START SWITCH CONNECTOR
3. REMOVE NEUTRAL START SWITCH
 - (a) Remove the control shaft lever.
 - (b) Pry off the lock washer and remove the nut.
 - (c) Remove the bolt and pull out the neutral start switch.
4. INSPECT NEUTRAL START SWITCH
(See page [AT-100](#))
5. INSTALL AND ADJUST NEUTRAL START SWITCH
(See page [AT-51](#))
6. CONNECT NEUTRAL START SWITCH CONNECTOR
7. INSTALL FRONT EXHAUST PIPE
(See page [EX-4](#))

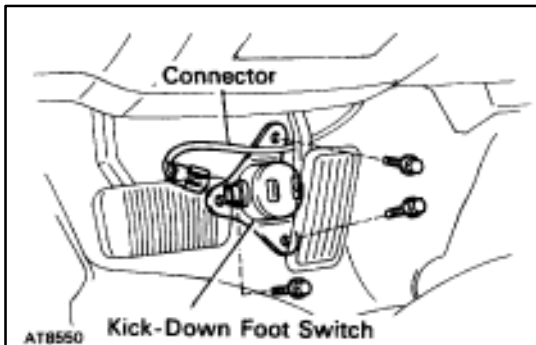

Kick-Down Switch

1. REMOVAL OF KICK-DOWN SWITCH
 - (a) Remove the three bolts and kick-down switch.
 - (b) Disconnect the kick-down switch connector.
2. INSPECTION OF KICK-DOWN SWITCH
(See page [AT-98](#))
3. INSTALLATION OF KICK-DOWN SWITCH
 - (a) Connect the kick-down switch connector.
 - (b) Install the kick-down switch and three bolts.