


LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

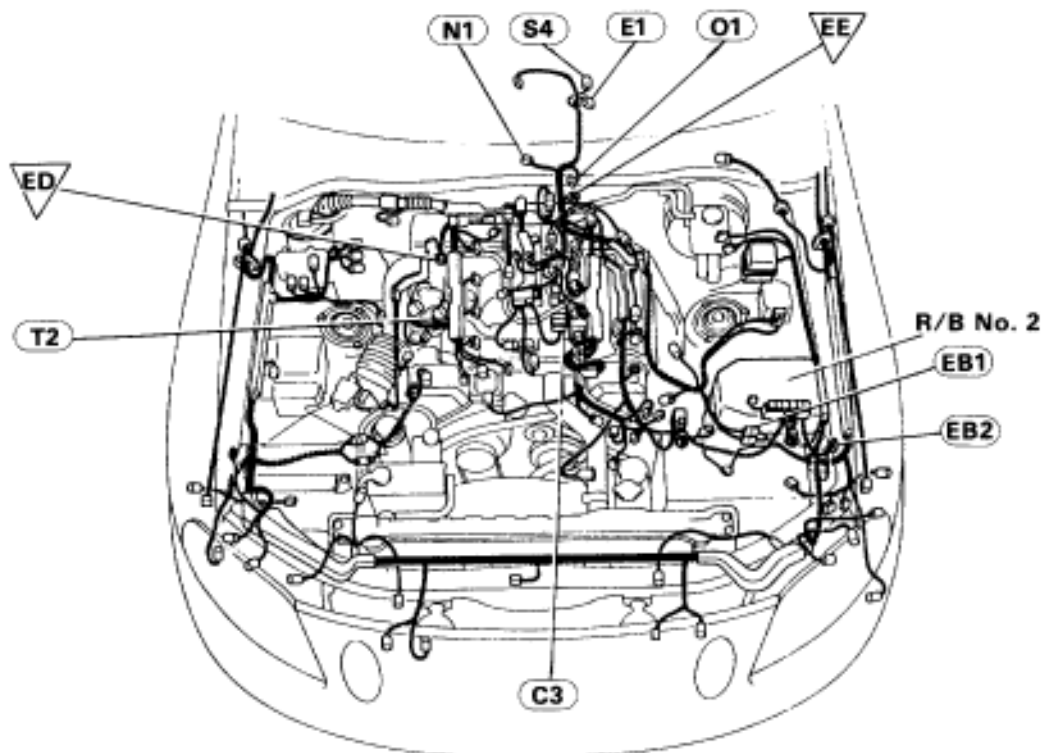

BE6630

C3**Check Connector**

Iej-23-1

E1**ECT Solenoid**

Ie-5-1

N1**Neutral Start Switch**

SH-9-1-A

O1**O/D Direct Clutch
Speed Sensor**

Ie-2-1-V

S4**No. 2 Speed Sensor
(For ECT)**

Ie-2-1-V

T2**Throttle Position
Sensor**

Ie-8-1-A

EB1

Ie-8-1-A




Ie-8-2-A

EB2

Ig-3-1-A




Ig-3-2-A

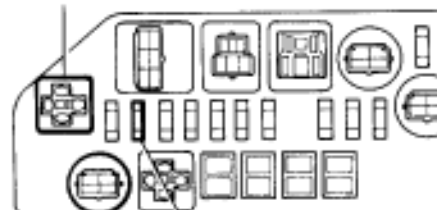R/B No. 2**Starter Relay**

BE6625

30 A EFI**EFI Main Relay**


Location of Connectors in Body

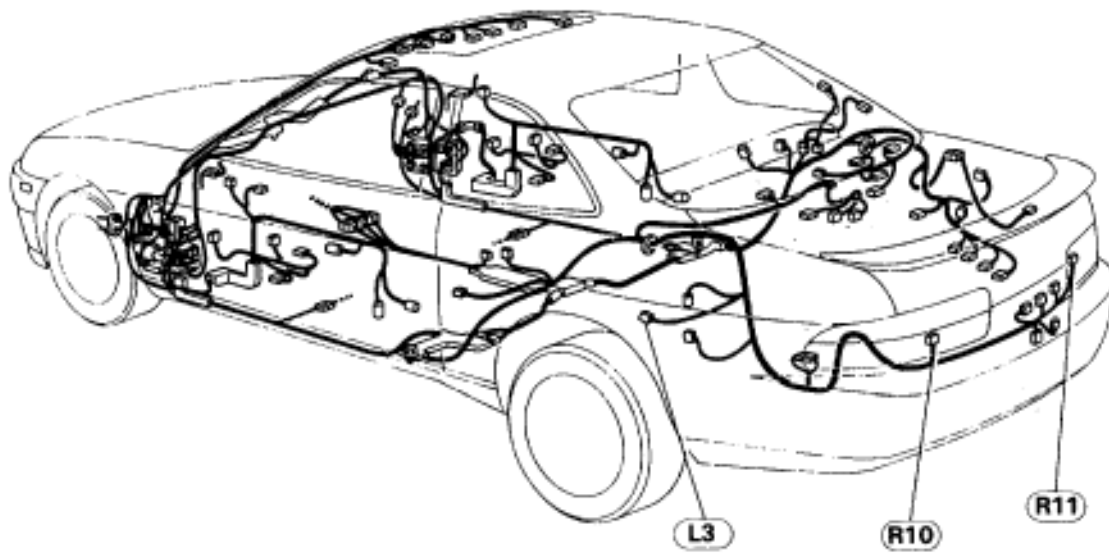

8E6632


L3**Light Failure Sensor**

e-12-1

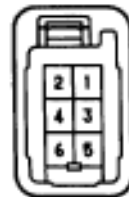R10 R11**Stop Light**

e-6-2-E

Location of Connectors in Instrument Panel

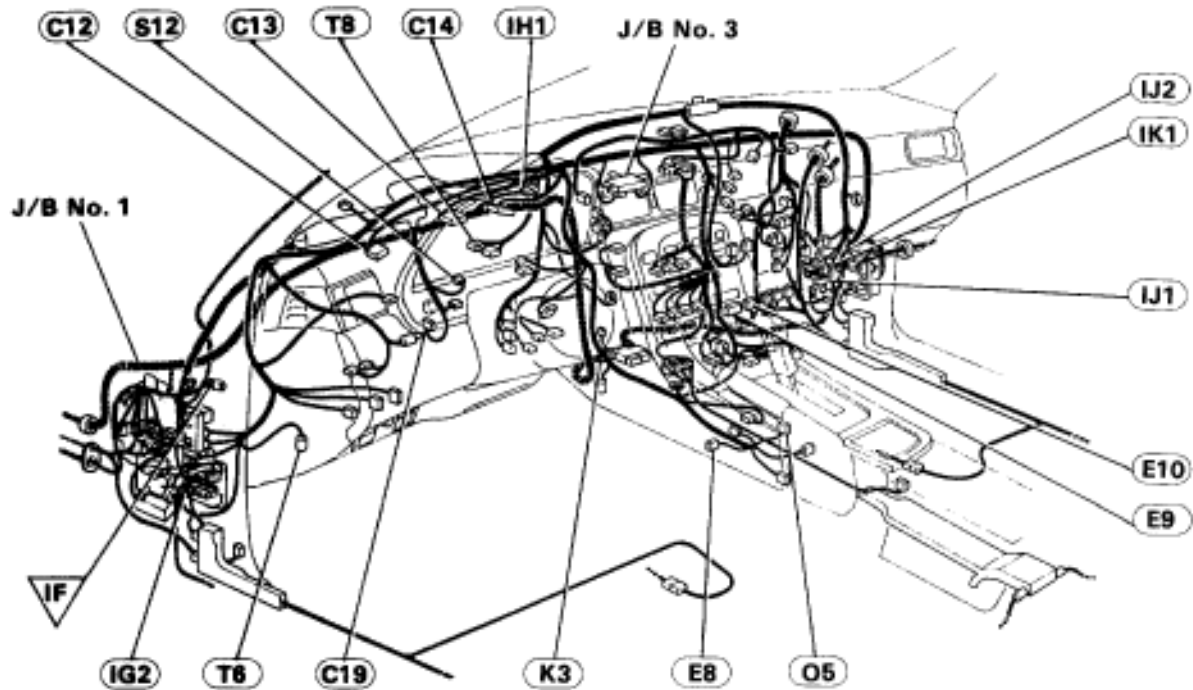

BE8631

C12


**Combination Meter,
O/D OFF Indicator Light**



eh-23-1

C13

**Combination
Meter**

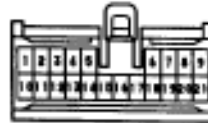

h-21-1

C14

 
**Combination Meter,
O/D OFF Indicator Light**



e-18-1

C19

Cruise Control ECU



vd-26-1-B

E8


**Pattern Select
Switch**




e-4-1

E9

Engine & ECT ECU

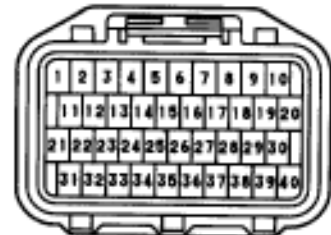

Id-40-1

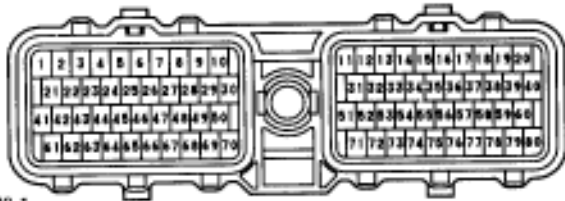(E10)**Engine & ECT ECU**


Id-80-1

(K3)**Kickdown Switch**

Is-2-1-X

(O5)**O/D Main Switch**

e-2-1

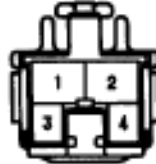(S12)**Stop Light Switch**

eg-4-1

(T6)**TDCL**

S-17-1

(T8)**Theft Deterrent and Door Lock ECU**


e-20-1

(IG2)

e-10-1

(IH1)

e-2-1

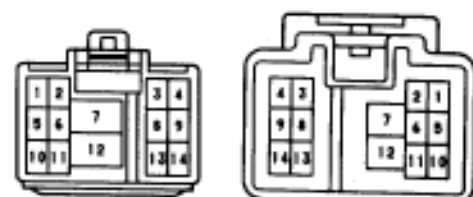(IJ1)


e-14-1

(IG2)


e-10-2

(IH1)

e-2-2

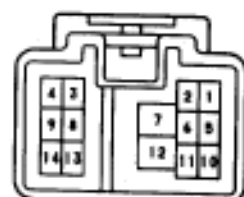(IJ1)

e-14-2

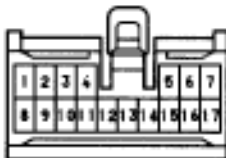(IJ2)

h-17-1



h-17-2



(IK1)

eh-23-1



eh-23-2-B

Location of Connectors in Instrument Panel

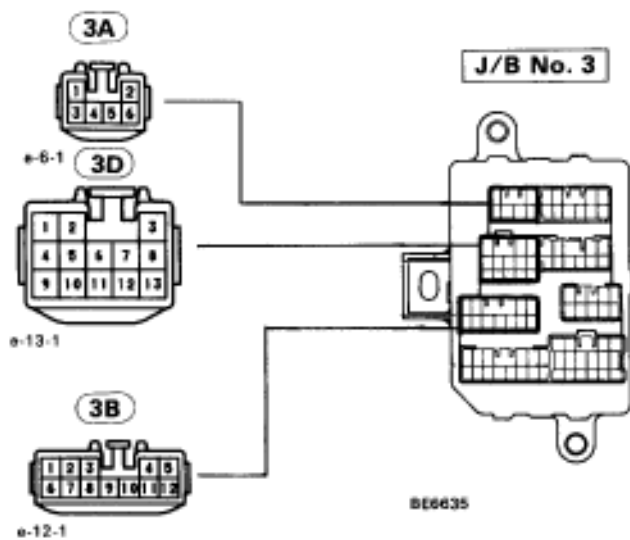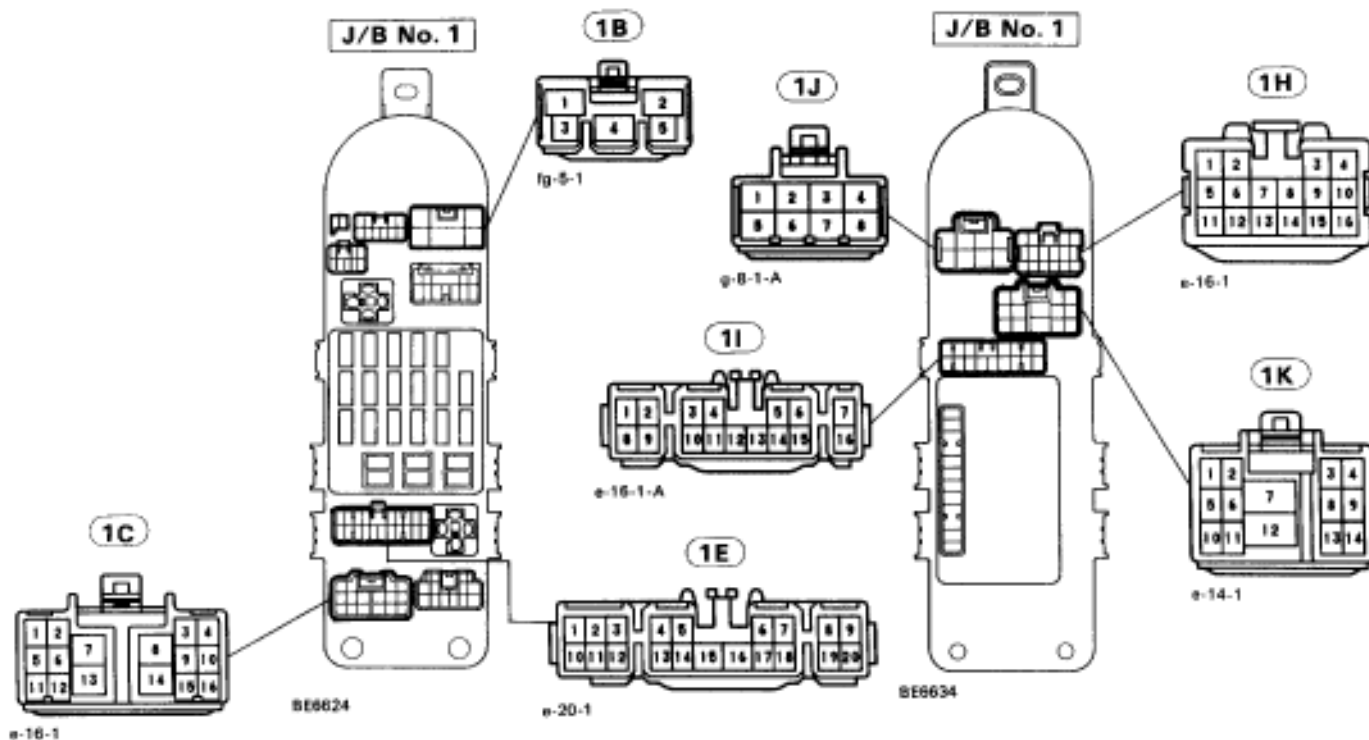

–MEMO–