


INSPECTION OF LOW OIL PRESSURE WARNING SWITCH

1. **INSPECT LOW OIL PRESSURE WARNING SWITCH**
 - (a) Check that there is continuity between terminal and ground with the engine stopped.
 - (b) Check that there is no continuity between terminal and ground with the engine running.

HINT: Oil pressure should be over 29 kPa (0.3 kg/cm, 4.3 psi)
If operation is not as specified, replace the switch.

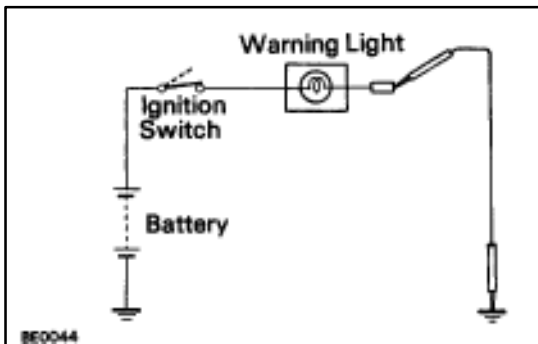


2. **INSPECT LOW OIL PRESSURE WARNING LIGHT**
 - (a) Disconnect the connector from the warning switch and ground terminal on the wire harness side connector.
 - (b) Turn the ignition switch ON, check that the warning light lights up.

If the warning light does not light up, test the bulb or inspect wire harness.

(Brake Fluid Level Warning Switch)


REMOVAL AND INSTALLATION OF BRAKE FLUID RESERVOIR TANK (LEVEL WARNING SWITCH)

1. **REMOVE BRAKE FLUID RESERVOIR TANK**
(See page [BR-11](#))
2. **INSTALL BRAKE FLUID LEVEL WARNING SWITCH**
For installation follow the removed procedure in reverse.

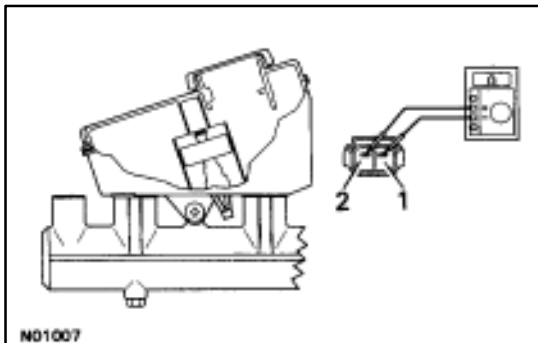


INSPECTION OF BRAKE FLUID LEVEL WARNING SWITCH

- (a) Remove the reservoir tank cap and strainer.
 - (b) Disconnect the connector.
 - (c) Check that there is no continuity between terminals with the switch OFF (float up).
 - (d) Use syphon, etc. to take fluid out of the reservoir tank.
 - (e) Check that there is continuity between terminals with the switch ON (float down).
 - (f) Pour the fluid back in the reservoir tank.
- If operation is not as specified, replace the switch.

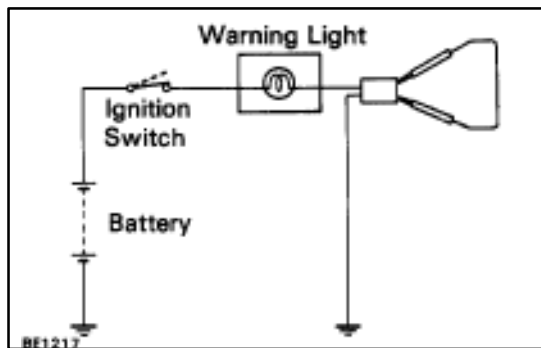

2. INSPECT BRAKE WARNING LIGHT

- Disconnect the connector from the brake fluid warning switch.
- Release the parking brake pedal.
- Connect terminals on the wire harness side of the level warning switch connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or wire harness.

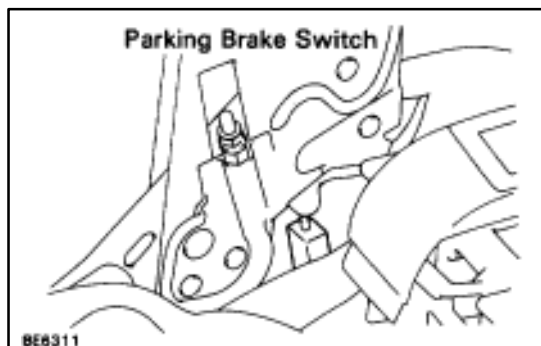

(Parking Brake Switch)


REMOVAL AND INSTALLATION OF PARKING BRAKE SWITCH

1. REMOVE PARKING BRAKE SWITCH

- Remove the driver's seat.
(See page [BO-58](#))
- Disconnect the connector and remove switch.

2. INSTALL PARKING BRAKE SWITCH


For installation follow the removal procedure in reverse.

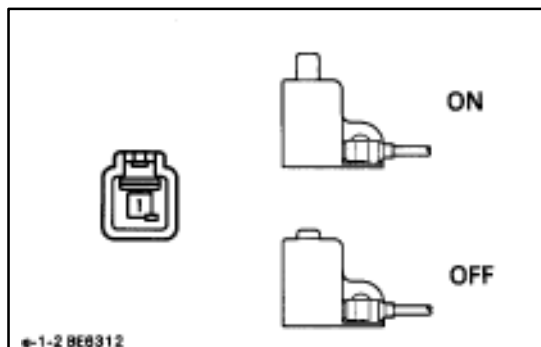

INSPECTION OF PARKING BRAKE SWITCH

1. INSPECT PARKING BRAKE SWITCH

- Check that there is continuity between terminal and switch body with the switch ON (switch pin released).
 - Check that there is no continuity between terminal and switch body with the switch OFF (switch pin pushed in.)
- If continuity is not as specified, replace the switch or inspect ground point.

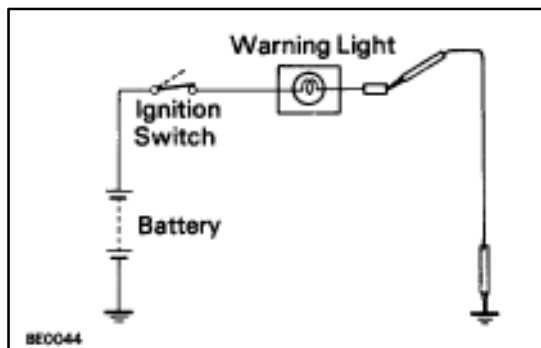

2. INSPECT BRAKE WARNING LIGHT

- Disconnect the connector from the parking brake switch and brake fluid warning switch.
- Ground terminal on the wire harness side connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or inspect wire harness.