
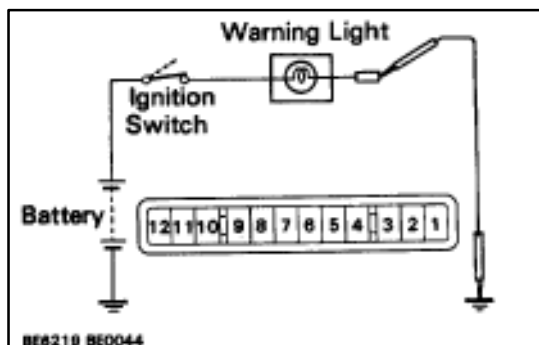


(Wiring Diagram)

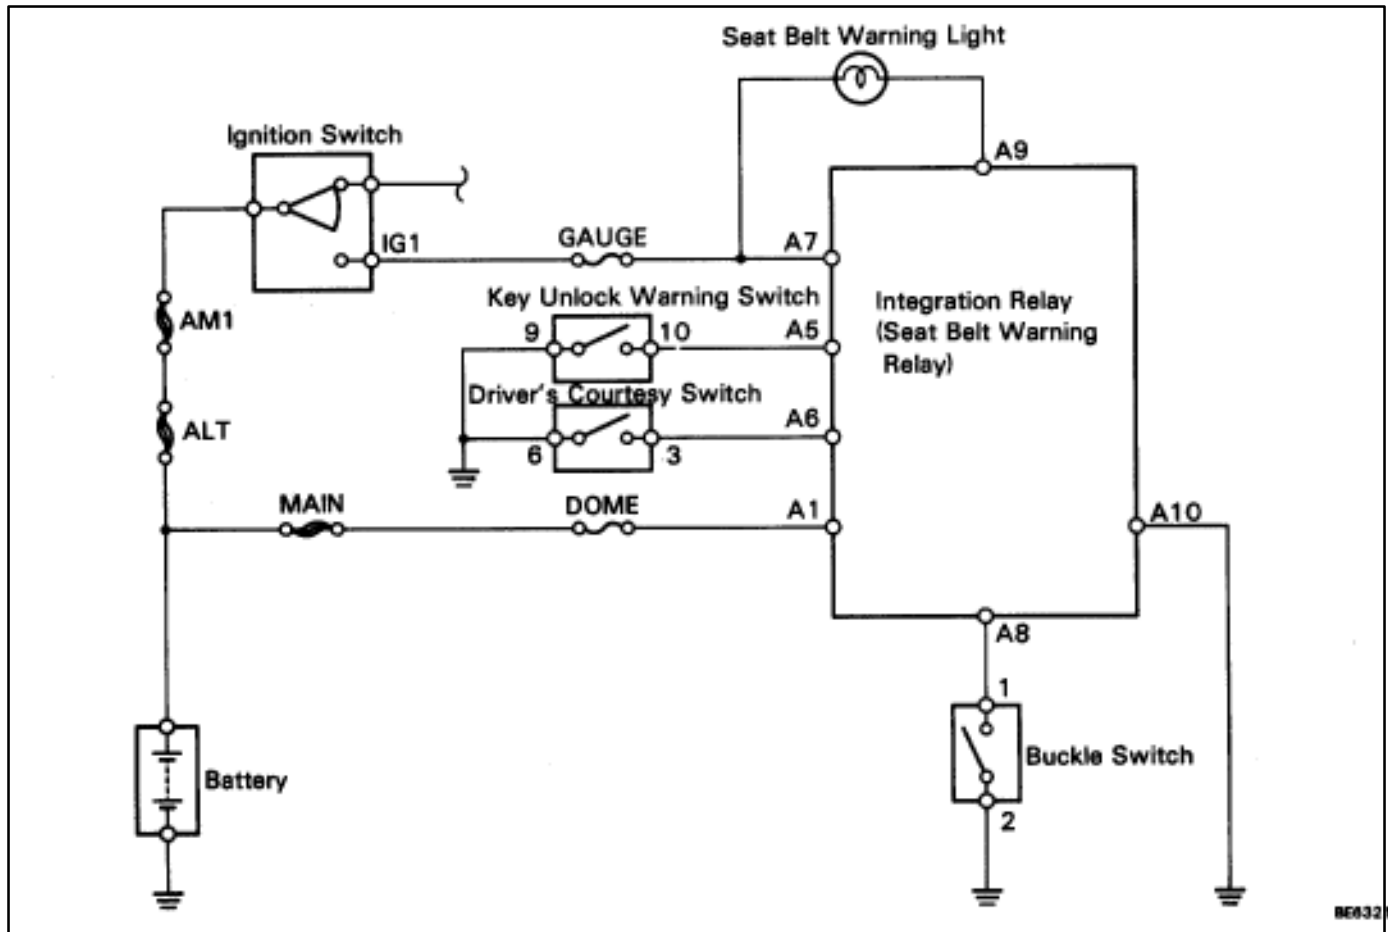

2. INSPECT SEAT BELT WARNING LIGHT

- Disconnect the connector from the seat belt warning relay.
- Ground terminal A9 on the wire harness die connector.
- Turn the ignition switch ON, check that the warning light lights up.

If the warning light does not light up, inspect the bulb or wire harness.


(Buckle Switch) REMOVAL AND INSTALLATION OF BUCKLE SWITCH

1. REMOVE BUCKLE SWITCH

- Remove the driver's seat.
- Disconnect buckle switch connector.
- Remove seat belt inner with buckle switch.

2. INSTALL BUCKLE SWITCH

For installation follow the removal procedure in reverse.

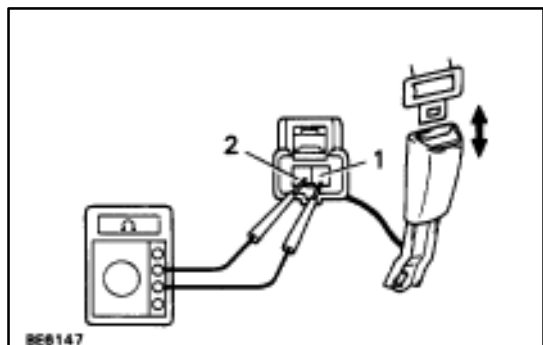


INSPECTION OF BUCKLE SWITCH

INSPECT BUCKLE SWITCH

(Continuity)

- Check that there is continuity between terminals on the switch side connector with the switch ON (belt fastened).
- Check that there is no continuity between terminals on the switch side connector with the switch OFF (belt unfastened).

If operation is not as specified, replace the seat belt inner.

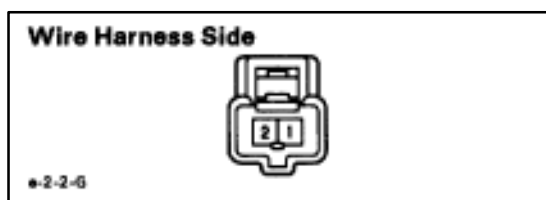

(Switch Circuit)

Disconnect the connector from switch and inspect the connector on wire harness side as shown.

Check for	Tester connection	Condition	Specified value
Chime operation	—————	Turn the ignition switch ON	Chime sounds for 4–8 sec.
		Ground terminal 2 and turn the ignition switch ON	No chime sound
Continuity	1–Ground	Constant	Continuity

If the circuit is not as specified, refer to [BE-122](#) wiring diagram, and inspect the circuits connected to other parts.