


# Connector Diagrams

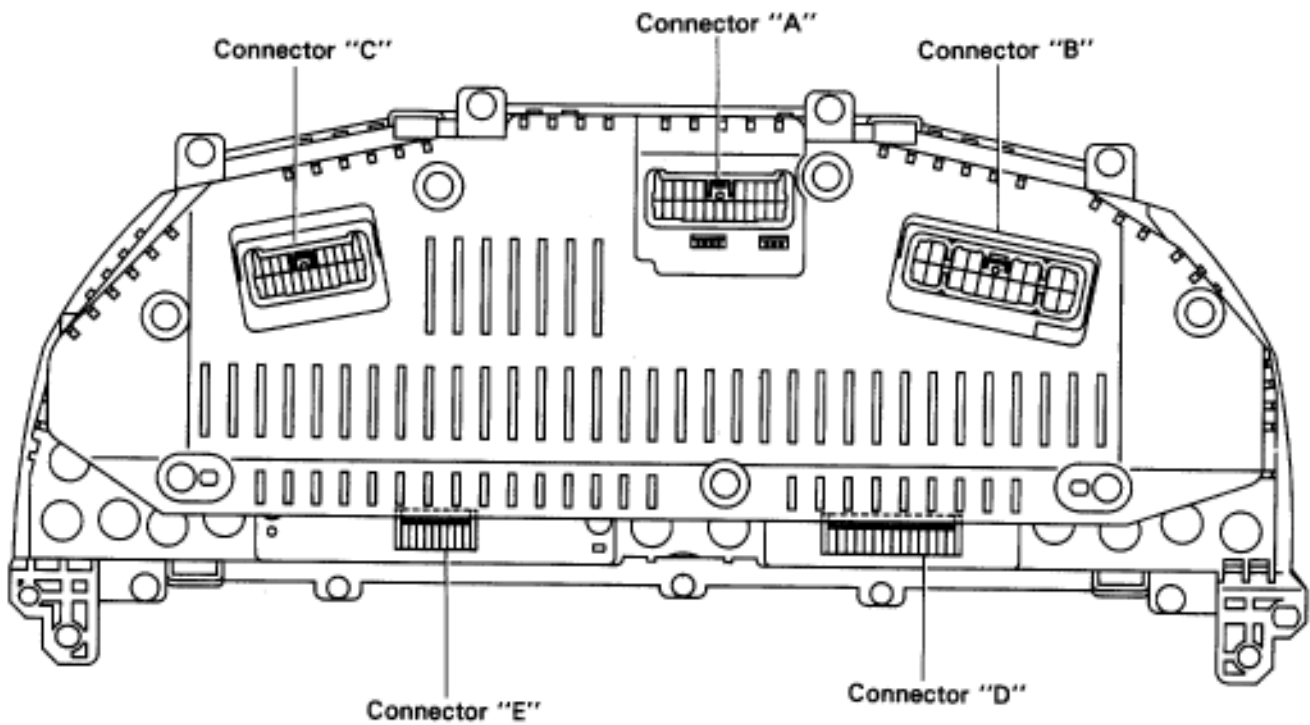

BE6283


Combination Meter

Connector "A"




BE6284

Connector "B"

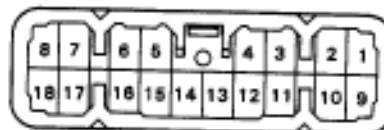

BE6285

Connector "C"

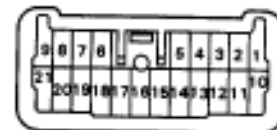

BE6286

Connector "D"



BE6287

Connector "E"



BE6288

## Connector Diagrams (Cont'd)

Speed Sensor



IS-3-2

Water Temperature  
Sender Gauge

BE2563

Fuel Sender



H-3-2

Parking Brake Switch



e-1-2

Coolant Level  
Warning Switch

IS-2-2-A

Engine Oil Level  
Warning Switch

BE3710

Low Oil Pressure  
Warning Switch

BE3928

Window Washer Level  
Warning Switch

 
IS-2-2-E

Brake Fluid Level  
Warning Switch

BE6289

Door Courtesy Switch  
(in Door Lock Assembly)

Ie-6-2-C

Integration Relay  
Connector "A"

BE6219

(USA)  
Connector "B"

BE6091

Odometer and  
Twin Trip Meter

BE6292

Clock

 


BE6291


(Canada)  
Connector "B"

BE6220

Light Failure Sensor



S-12-2

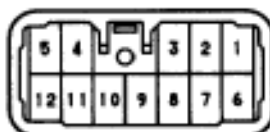Odometer and  
Twin Trip Switch

e-12-2-B