

## (Light Failure Sensor)

### REMOVAL AND INSTALLATION OF LIGHT FAILURE SENSOR

(See page [BE-62](#))


### INSPECTION OF LIGHT FAILURE SENSOR

#### 1. INSPECT LIGHT FAILURE SENSOR

(See page [BE-63](#))

#### 2. INSPECT LIGHT FAILURE WARNING LIGHT

- Disconnect the connector from the light failure sensor and ground terminal 4 on the wire harness side connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or inspect wire harness.

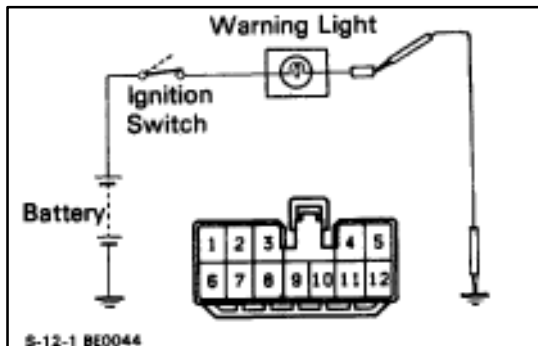


## (Rheostat Light Control Volume)

### REMOVAL AND INSTALLATION OF RHEOSTAT LIGHT CONTROL VOLUME

(See page [BE-103](#))

### INSPECTION OF RHEOSTAT LIGHT CONTROL VOLUME

(See page [BE-73](#))

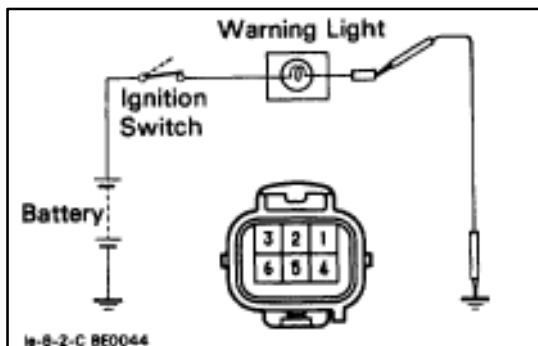

## (Courtesy Switch)

### REMOVAL AND INSTALLATION OF COURTESY SWITCH

(See page [BE-79](#))

### INSPECTION OF COURTESY SWITCH

#### 1. INSPECTION OF COURTESY SWITCH

(See page [BE-79](#))

#### 2. INSPECT OPEN DOOR WARNING LIGHT

Disconnect the connector from the door courtesy switch, and ground terminal 3 on the wire harness side connector and check that the warning light lights up. If the warning light does not light up, inspect the bulb or wire harness.