


## 2. INSPECT BRAKE WARNING LIGHT

- Disconnect the connector from the brake fluid warning switch.
- Release the parking brake pedal.
- Connect terminals on the wire harness side of the level warning switch connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or wire harness.

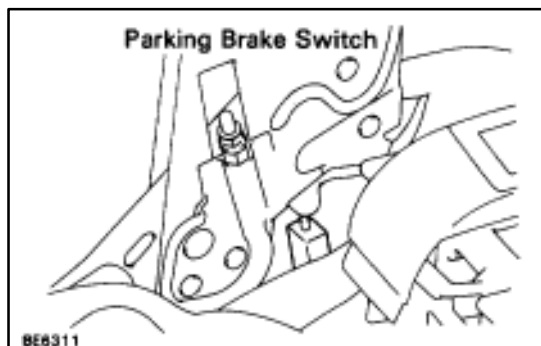

## (Parking Brake Switch)


### REMOVAL AND INSTALLATION OF PARKING BRAKE SWITCH

#### 1. REMOVE PARKING BRAKE SWITCH

- Remove the driver's seat.  
(See page [BO-58](#))
- Disconnect the connector and remove switch.

#### 2. INSTALL PARKING BRAKE SWITCH


For installation follow the removal procedure in reverse.

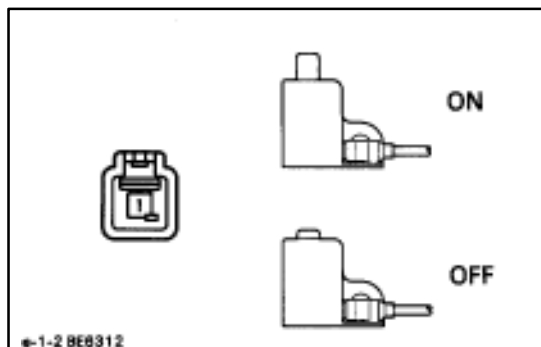

### INSPECTION OF PARKING BRAKE SWITCH

#### 1. INSPECT PARKING BRAKE SWITCH

- Check that there is continuity between terminal and switch body with the switch ON (switch pin released).
  - Check that there is no continuity between terminal and switch body with the switch OFF (switch pin pushed in.)
- If continuity is not as specified, replace the switch or inspect ground point.

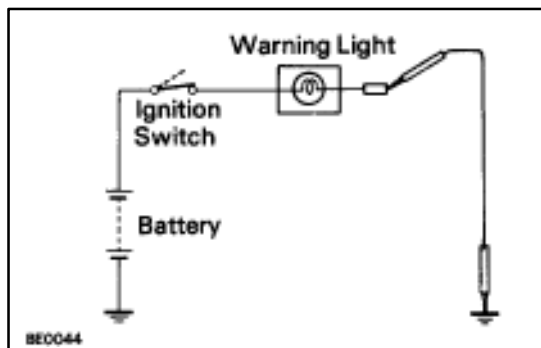

#### 2. INSPECT BRAKE WARNING LIGHT

- Disconnect the connector from the parking brake switch and brake fluid warning switch.
- Ground terminal on the wire harness side connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or inspect wire harness.