

(Light Failure Sensor)

REMOVAL AND INSTALLATION OF LIGHT FAILURE SENSOR

(See page [BE-62](#))


INSPECTION OF LIGHT FAILURE SENSOR

1. INSPECT LIGHT FAILURE SENSOR

(See page [BE-63](#))

2. INSPECT LIGHT FAILURE WARNING LIGHT

- Disconnect the connector from the light failure sensor and ground terminal 4 on the wire harness side connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or inspect wire harness.

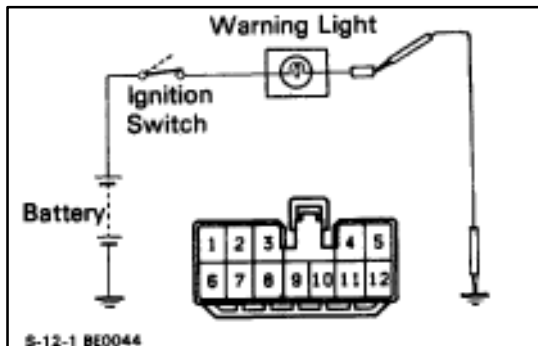


(Rheostat Light Control Volume)

REMOVAL AND INSTALLATION OF RHEOSTAT LIGHT CONTROL VOLUME

(See page [BE-103](#))

INSPECTION OF RHEOSTAT LIGHT CONTROL VOLUME

(See page [BE-73](#))

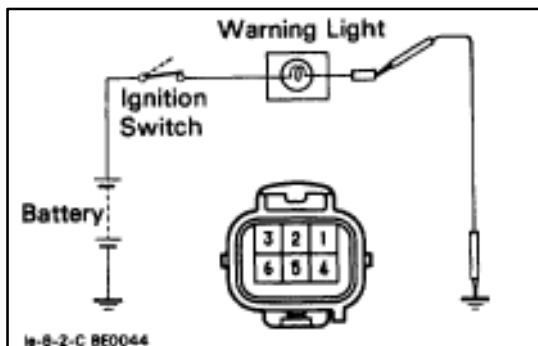

(Courtesy Switch)

REMOVAL AND INSTALLATION OF COURTESY SWITCH

(See page [BE-79](#))

INSPECTION OF COURTESY SWITCH

1. INSPECTION OF COURTESY SWITCH

(See page [BE-79](#))

2. INSPECT OPEN DOOR WARNING LIGHT

Disconnect the connector from the door courtesy switch, and ground terminal 3 on the wire harness side connector and check that the warning light lights up. If the warning light does not light up, inspect the bulb or wire harness.