

Troubleshooting/Warning Lights and Indicator Light in Meter Cluster

You will find the cause of trouble more easily using the table shown below. In this table, the numbers indicate the order priority of the causes in trouble. Check each part in the order shown. If necessary, replace the parts.

See page		BE-6	BE-4, 21	BE-4, 20	BE-4, 20	BE-4, 20	BE-62	BE-79	BE-11	BE-11	BE-11	BE-12	0	-
Part name		Bulb	DOM E Fuse	ECU-B Fuse	IGN Fuse	GAUGE Fuse	Light Failure Sensor	Courtesy Switch (Door)	Brake Fluid Warning Switch	Parking Brake Switch	Low Oil Pressure Warning Switch	Seat Belt Warning Relay	Wire Harness	Other Parts
Warning light or indicator light does not light up or abnormal operation	Trouble													
	Open Door	1	2					3					4	
	AIR BAG	1		2									3	4*1
	Discharge	1			2								3	4*2
	Brake	1				2			3	4				
	TRAC (w/ TRAC)	1				2							3	4*3
	Check Engine	1				2							3	4*4
	Low Oil Pressure	1				2					3		4	
	Seat Belt	1				2						3	4	5*5
	Light Failure	1				2	3						4	

*1 : Center Airbag Sensor Assembly

*2 : Alternator

*3 : ABS and TRAC ECU

*4 : Engine and ECT ECU

*5 : Buckle Switch