


(Window Washer Level Warning Switch)

REMOVAL AND INSTALLATION OF WINDOW WASHER LEVEL WARNING SWITCH

1. REMOVE WINDOW WASHER LEVEL WARNING SWITCH

- Remove washer tank (See page [BE-92](#)).
- Separate the window washer level warning switch from washer tank.

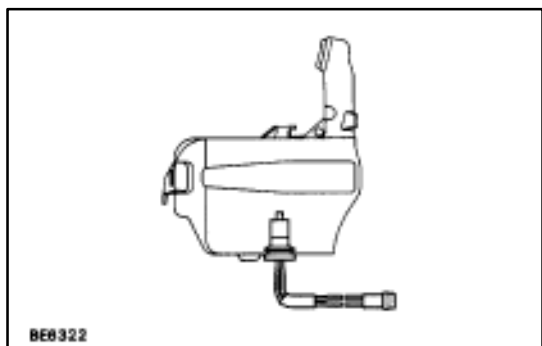

2. INSTALL WINDOW WASHER LEVEL WARNING SWITCH

For installation follow the removal procedure in reverse.

INSPECTION OF WINDOW WASHER LEVEL WARNING SWITCH

INSPECT WINDOW WASHER LEVEL WARNING SWITCH

- Check that there is no continuity between terminals with the switch OFF (float up).
- Check that there is continuity between terminals with the switch ON (float down).

If operation is not as specified, replace the switch.

