



INPUT SIGNAL CHECK

Output Code

1. (a) For check No. 1 ~ No. 2
Turn the ignition switch on.
(b) For check No. 3 ~ No. 4
Jack up the vehicle.
Start the engine.
 2. Turn the control switch to SET/COAST position and hold it down (1).
 3. Push the main switch on (2).
 4. Check that the CRUISE MAIN indicator light blinks twice repeatedly.
 5. Turn the SET/COAST switch off.
 6. Operate each switch as listed in the table below.
 7. Read the blinking pattern of the CRUISE MAIN indicator light.
 8. After performing the check, turn the main switch off.
- HINT: When two or more signals are input to the ECU, only the lowest-numbered code is displayed.

No.	CRUISE MAIN Indicator Light Blinking Pattern.	Operation Method	Diagnosis
1	Turn SET/COAST switch ON.		SET/COAST switch circuit is normal.
2	Turn RES/ACC switch ON.		RES/ACC switch circuit is normal.
3	Turn CANCEL switch ON.		CANCEL switch circuit is normal.
	Turn stop light switch ON. (Depress brake pedal)		Stop light switch circuit is normal.
	Turn parking brake switch ON. (Release parking brake)		Parking brake switch circuit is normal.
	Turn neutral start switch ON. (Shift to N or P range)		Neutral start switch circuit is normal.
4	Drive at 40 km/h (25 mph) or higher.		Speed sensor is normal.
	Drive at 40 km/h (25 mph) or below.		