


LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

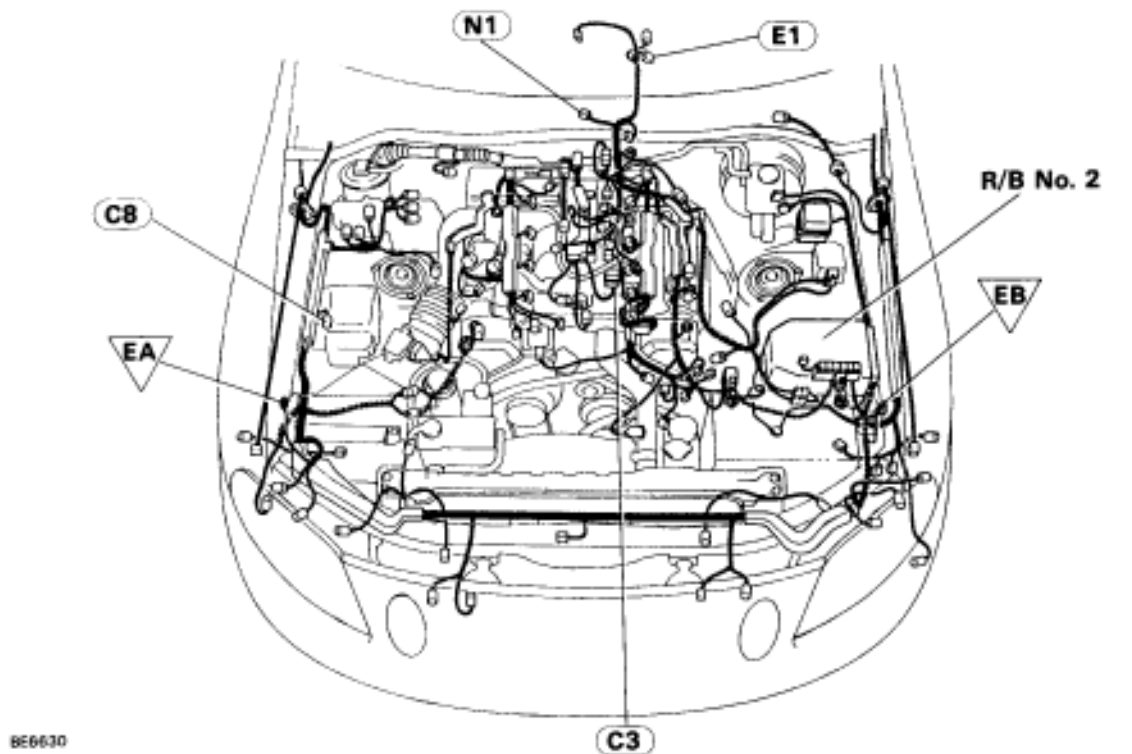

C3
Check Connector



Hj-23-1

C8
Actuator



Ia-7-1

E1
No. 2 Solenoid Valve
for ECT




Ia-6-1

N1
Neutral Start
Switch



R/B No. 2

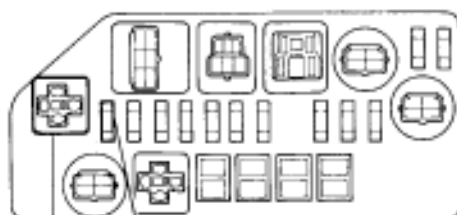


Starter Relay

BE6625


BE6625

Location of Connectors in Body

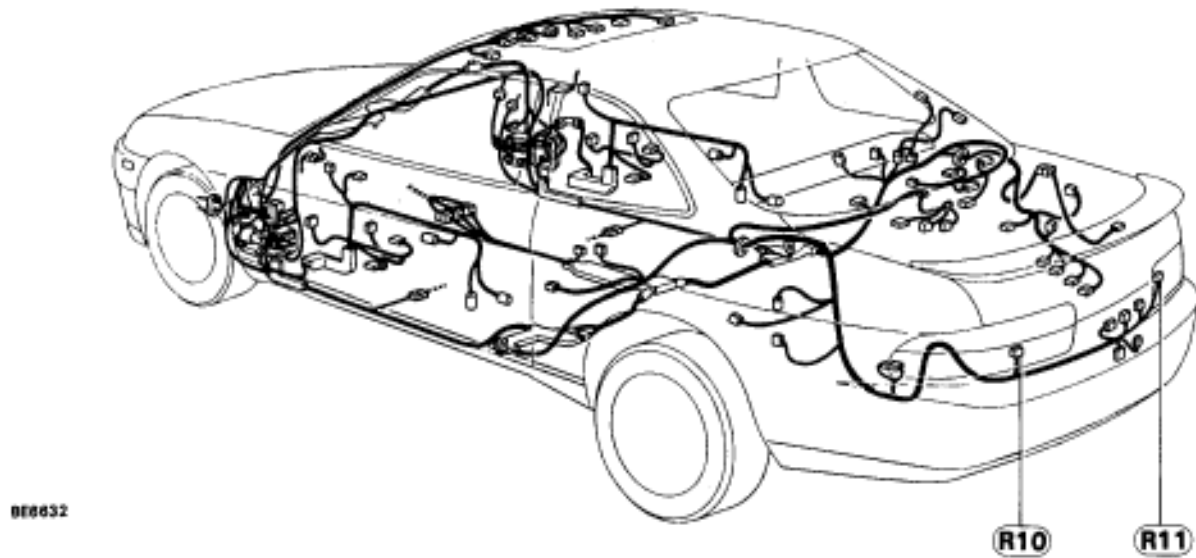


R10 R11

Stop Light

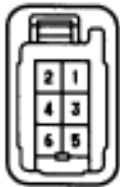

• 6-2-E

Location of Connectors in Instrument Panel

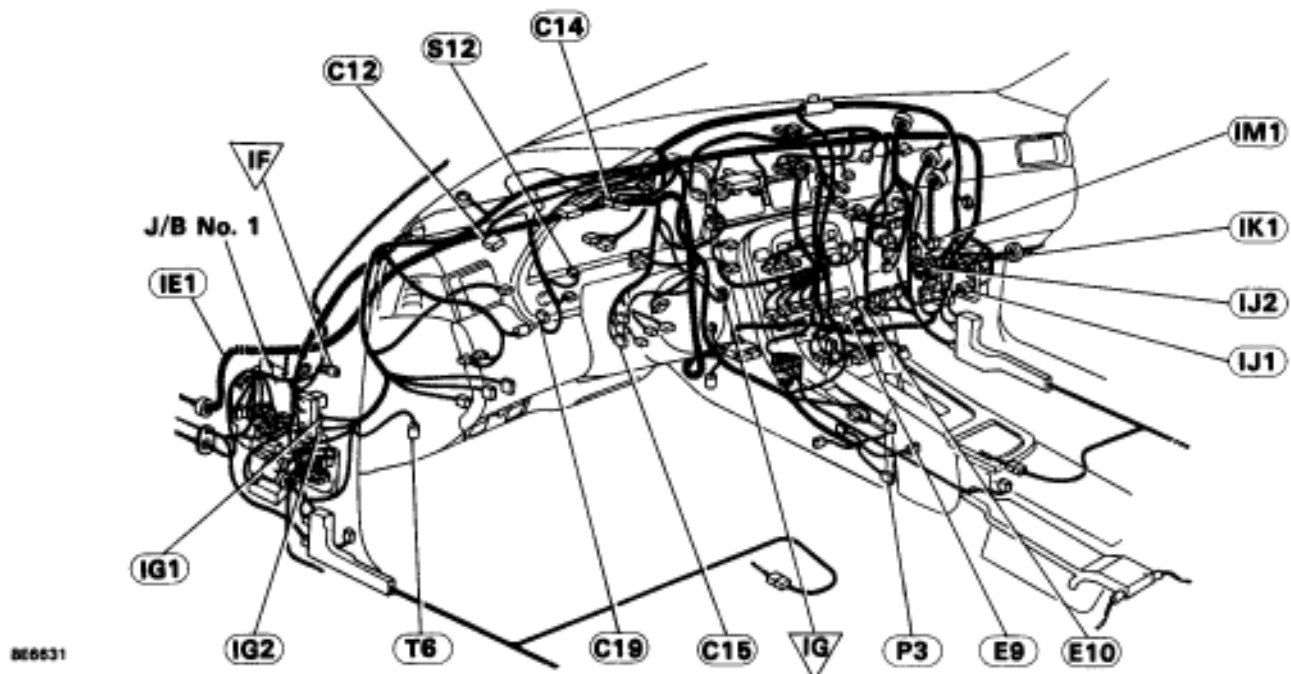**C12**


Power Indicator Light
Brake Warning Light



eh-23-1

C14

Power Indicator Light
Brake Warning Light

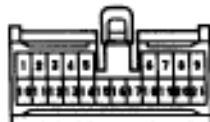

h-21-1

C15

Main & Control Switches

**C19**


Cruise Control ECU



Vd-26-1-B

E9


Engine & ECT ECU

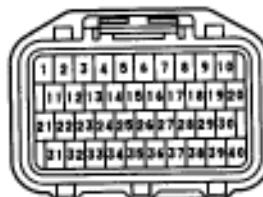

ld-40-1

E10

Engine & ECT ECU

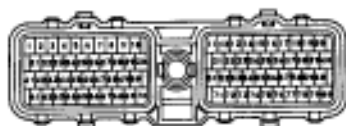

ld-80-1

P3

Parking Brake Switch



g-1-1

S12

Stop Light Switch



eg-4-1


T6

TDCL



S-17-1

IE1

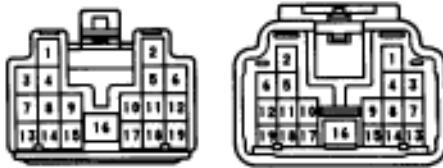


eg-19-1

eg-19-2

IG1



eh-23-1

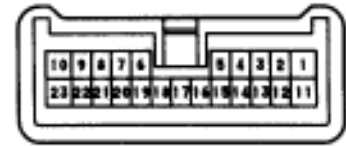

eh-23-2

IG2




e-10-1

e-10-2

IJ1




e-14-1

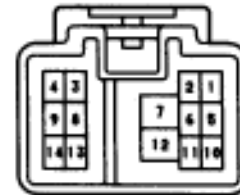

e-14-2

IJ2

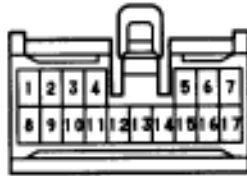


h-17-1



h-17-2

IK1

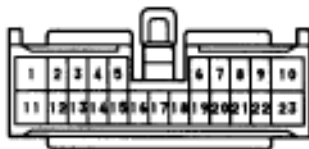

eh-23-1




eh-23-2

IM1



e-14-1

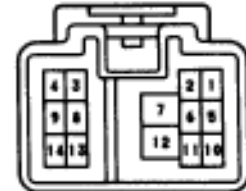

e-14-2

Location of Connectors in Instrument Panel

