


## TC Circuit


### — CIRCUIT DESCRIPTION —

This circuit sends a signal to the ECU that diagnostic code output is required.

### — DIAGNOSTIC CHART —

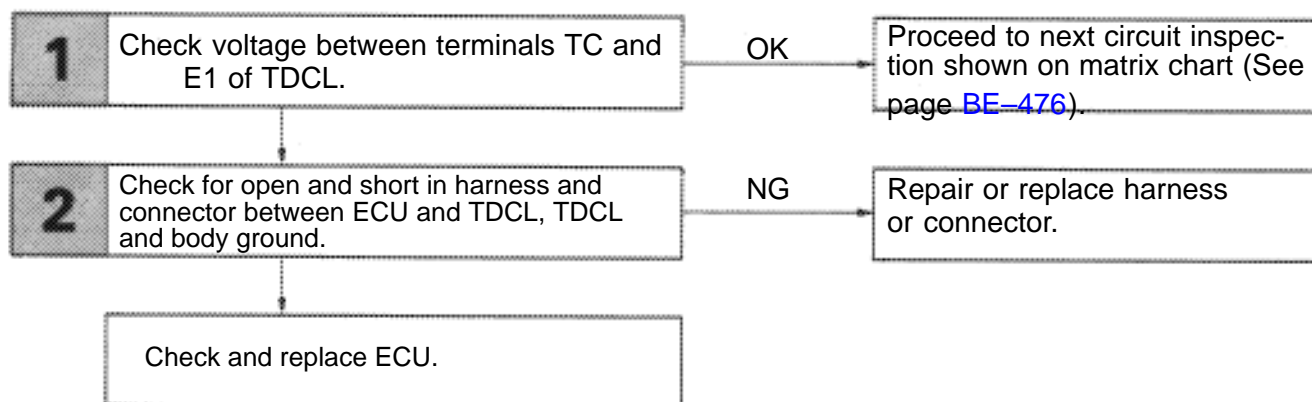


### WIRING DIAGRAM

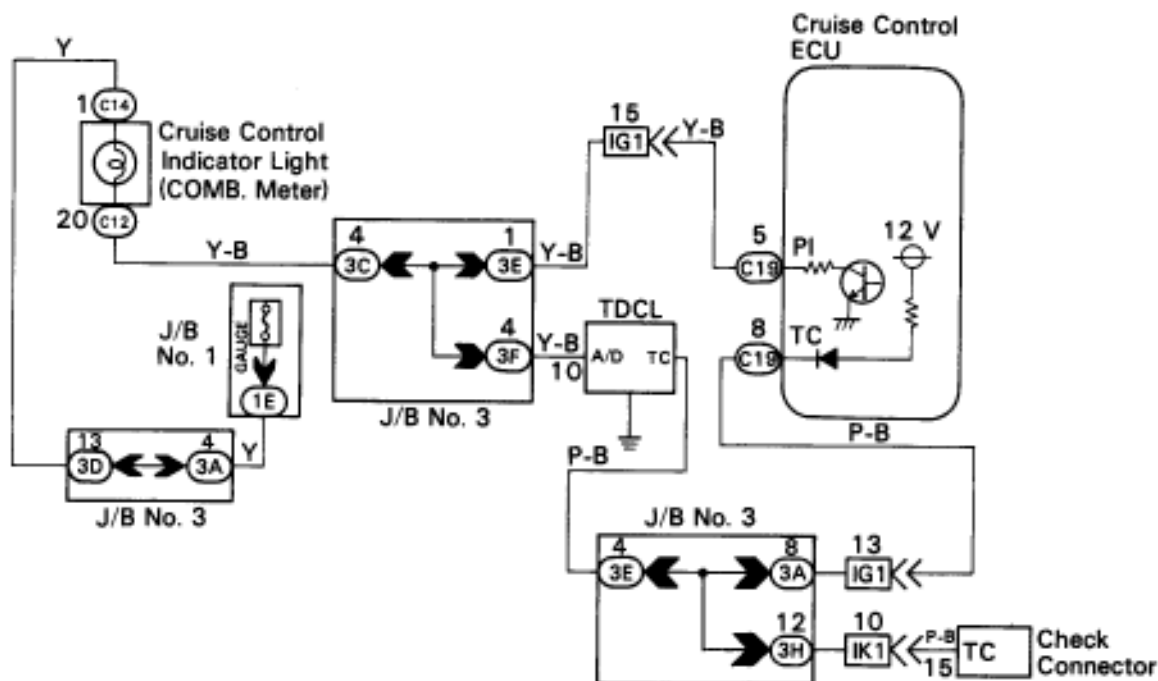

## INSPECTION PROCEDURE

### 1 Check voltage between terminals Tc and E1 of TDCL.

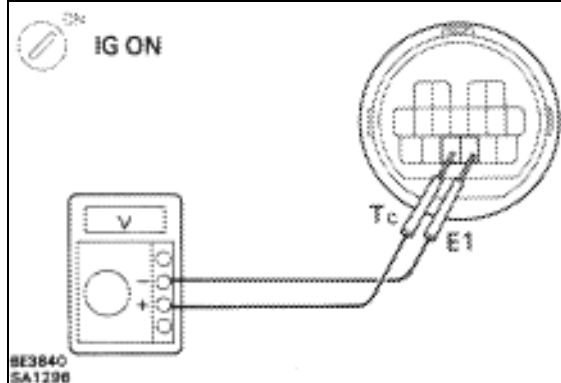

- C** (1) Turn ignition switch ON.  
(2) Measure voltage between terminals Tc and E1 of TDCL.

**OK**  
Voltage: 10 – 14

NG

OK

Proceed to next circuit inspection shown on matrix chart  
(See page [BE-476](#)).

### 2 Check for open and short in harness and connector between ECU and TDCL, TDCL and body ground (See page [IN-27](#)).

OK

NG

Repair or replace harness or connector.

Check and replace ECU.