



WIRING DIAGRAM

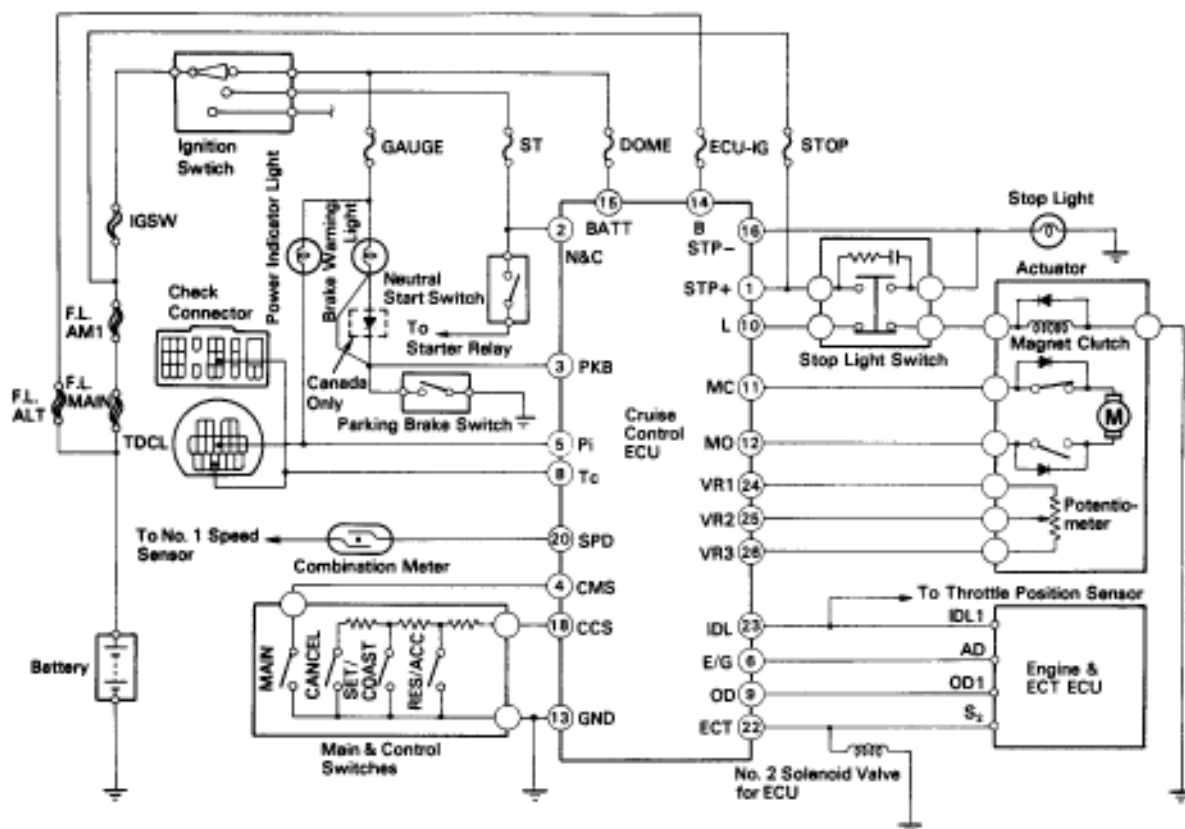

C19

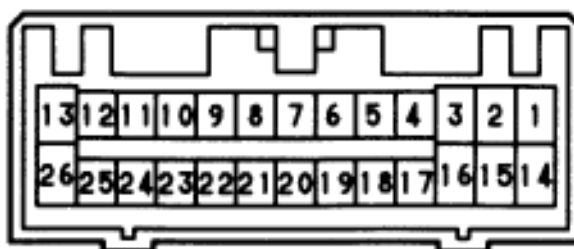

Vd-26-2-8

CRUISE Control ECU

No.	Symbol	Terminal Name	No.	Symbol	Terminal Name
C19-1	STP+	Stop Light Switch	C19-14	B	Power Source
C19-2	N&C	Neutral Start Switch	C19-15	BATT	Backup Power Source
C19-3	PKB	Parking Brake Switch	C19-16	STP-	Stop Light Switch
C19-4	CMS	Main Switch	C19-17	—	—
C19-5	PI	CRUISE MAIN Indicator Light	C19-18	CCS	Control Switch
C19-6	E/G	Engine & ECT ECU	C19-19	—	—
C19-7	—	—	C19-20	SPD	Speed Sensor
C19-8	Tc	TDCL	C19-21	—	—
C19-9	OD	Engine & ECT ECU	C19-22	ECT	Engine & ECT ECU
C19-10	L	Magnetic Clutch	C19-23	IDL	Throttle Position Sensor
C19-11	MO	Motor	C19-24	VR1	Position Sensor
C19-12	MC	Motor	C19-25	VR2	Position Sensor
C19-13	GND	Ground	C19-26	VR3	Position Sensor