
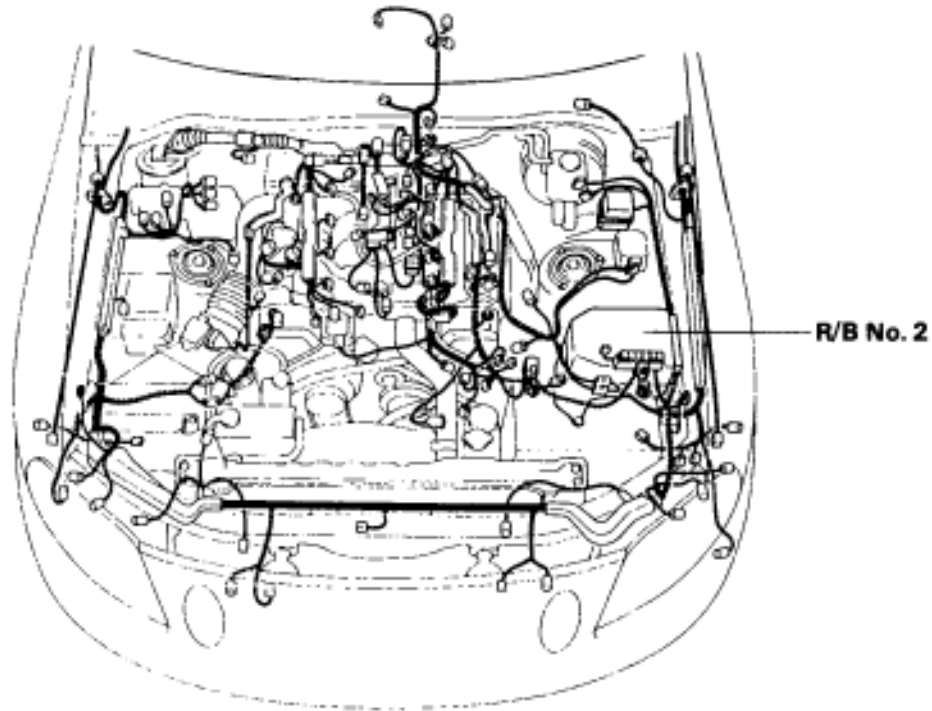


Location of Connectors

Location of Connectors in Engine Compartment

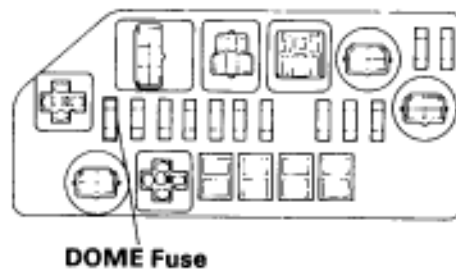


BE6630

R/B No. 2

BE6626

Location of Connectors in Body

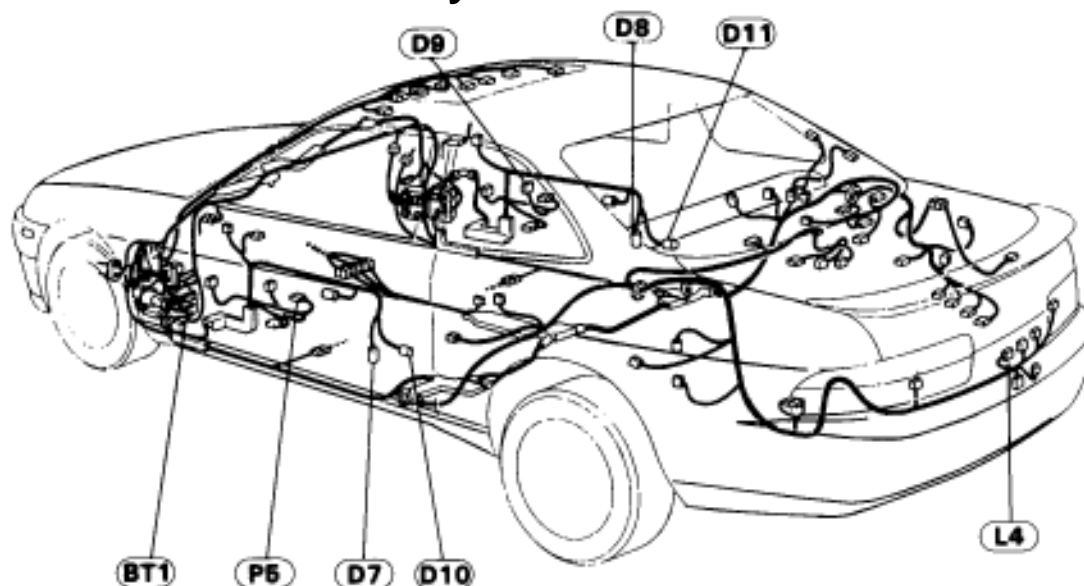

BE6632
D7 D8
 Door Key Lock and
 Unlock Switch



h-3-1

D9
 Door Lock Control
 Switch (Driver's)



e-4-1-D

D10 D11
 Door Lock Motor and Door
 Unlock Detection Switch



e-6-1-C

L4
 Luggage Compartment
 Door Opener Motor



H-1-1

P5
 Door Lock Control
 Switch (Passenger's)




e-10-1

BT1




e-20-1-B

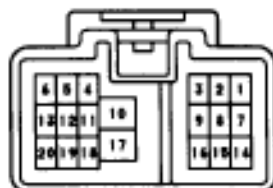

e-20-2-B

Location of Connectors in Instrument Panel

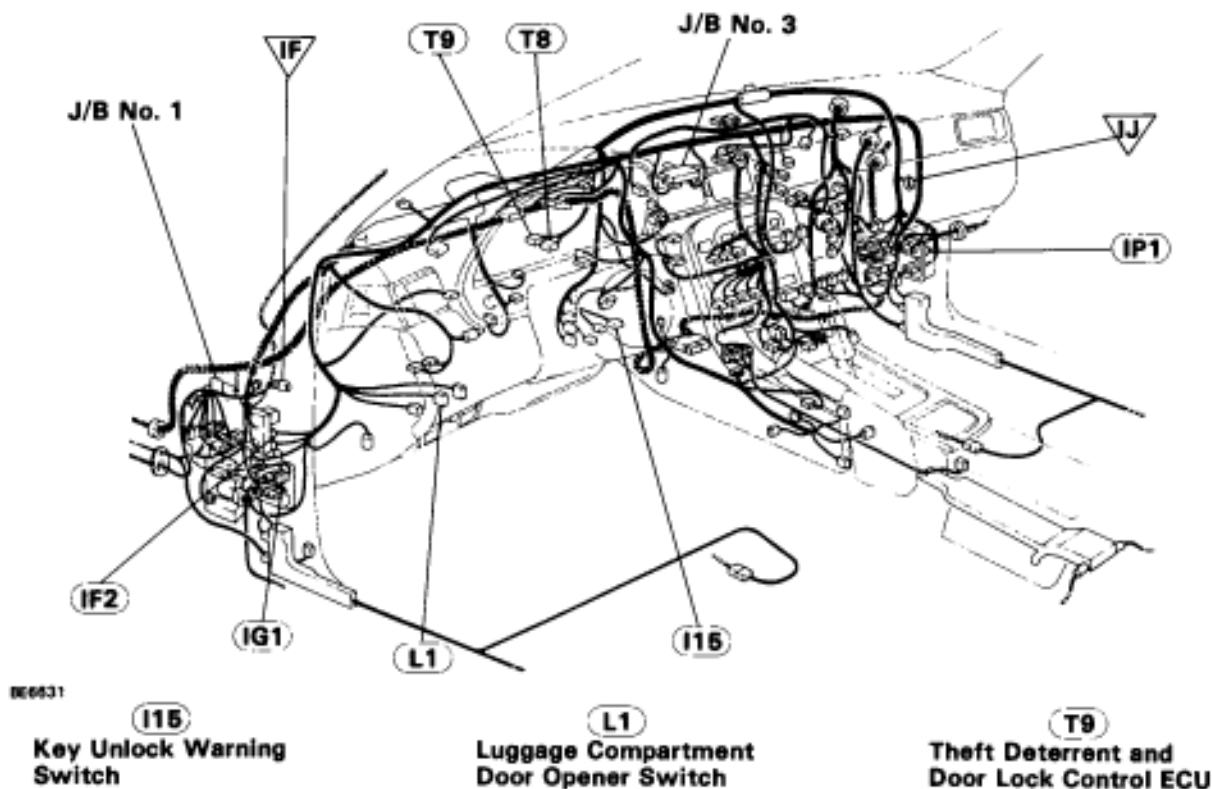

BE6531




eg-11-1



e-2-1-G



e-20-1

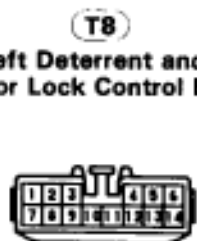


e-14-1-A




e-20-1



e-20-2

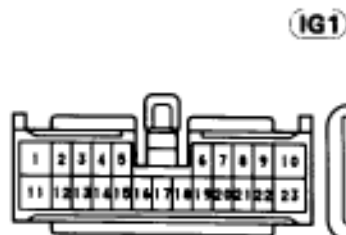

eh-23-1

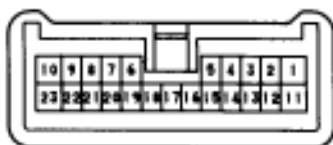

eh-23-2



e-20-1



e-20-2

