

MATRIX CHART OF PROBLEM SYMPTOMS

Perform troubleshooting of the circuits for the applicable problem symptom in the order given in the chart below. Proceed to the page located for each circuit.

HINT:

- If the instruction "Proceed to next circuit inspection shown on matrix chart" is given in the flow chart for each circuit, proceed to the circuit with the next highest number in the table to continue the check.
- If the trouble still reappears even though there are no abnormalities in any of the other circuits, then check or replace the Theft Deterrent and Door Lock ECU as the last step.

See page	BE-362	BE-364	BE-366	BE-368	BE-370	BE-372	BE-374	BE-376	BE-378	IN-32
Suspect Area	ECU Power Source Circuit	Actuator Power Source Circuit	Door Lock Motor Circuit	Luggage Compartment Door Opener Motor Circuit	Door Lock Control Switch Circuit	Door Key Lock and Unlock Switch Circuit	Key Unlock Warning Switch Circuit	Luggage Compartment Door Opener Main Switch and Opener Switch Circuit	Door Open Detection Switch Circuit	Theft Deterrent and Door Lock ECU
Symptom										
Whole functions of the door lock control system does not operate.	1	2	4	3						5
All doors or some doors are not locked and unlocked with the Door Lock Control Switch and Key Operated Switch. (Luggage compartment door opener function normally operate.)			3		1	2				4
Doors cannot be locked or unlocked with the door lock control switch. (Doors lock and unlock normally with the key operated switch.)					1		2		3	4
Doors are not locked or unlocked with the key operated switch. (Doors lock and unlock normally with the door lock control switch.)						1				2
Key confinement prevention function does not operate. (Doors lock and unlock normally with the key operated switch).							1		2	3
Luggage compartment door opener function does not operate.				2				1		3