


TERMINALS OF ECU

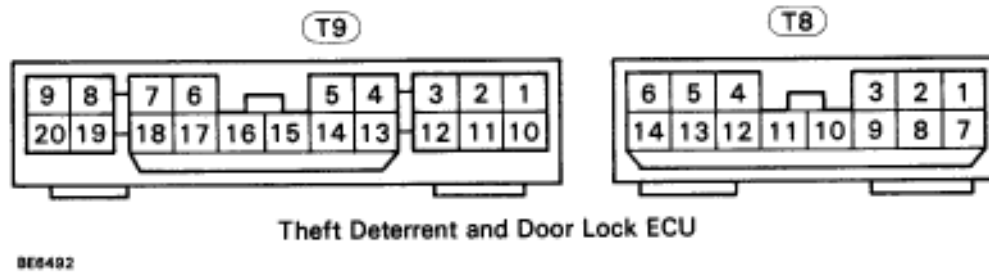

No.	Symbol	Terminal Name	No.	Symbol	Terminal Name
T8-3	ACT-	Door Lock Motor	T8-13	DSWD	Door Open Detection Switch
T8-4	ACT+	Door Lock Motor	T8-14	L1	Door Key Lock and Unlock Switch (Lock)
T8-5	TO	Luggage Compartment Door Opener Motor	T8-15	UL1	Door Key Lock and Unlock Switch (Unlock)
T8-6	KSW	Key Unlock Warning Switch	T8-16	E	Ground
T8-7	LSWP	Door Unlock Detection Switch	T8-17	L2	Door Lock Control Switch (Lock)
T8-8	+B2	Actuator Power Source	T8-18	UL2	Door Lock Control Switch (Unlock)
T8-10	UL3	Door Key Lock and Unlock Switch (Unlock)	T8-19	TSW	Luggage Compartment Door Opener Switch
T8-11	LSWD	Door Unlock Detection Switch	T8-20	+B1	ECU Power Source
T8-12	DSWP	Door Open Detection Switch			