




# HORN SYSTEM

## Parts Location

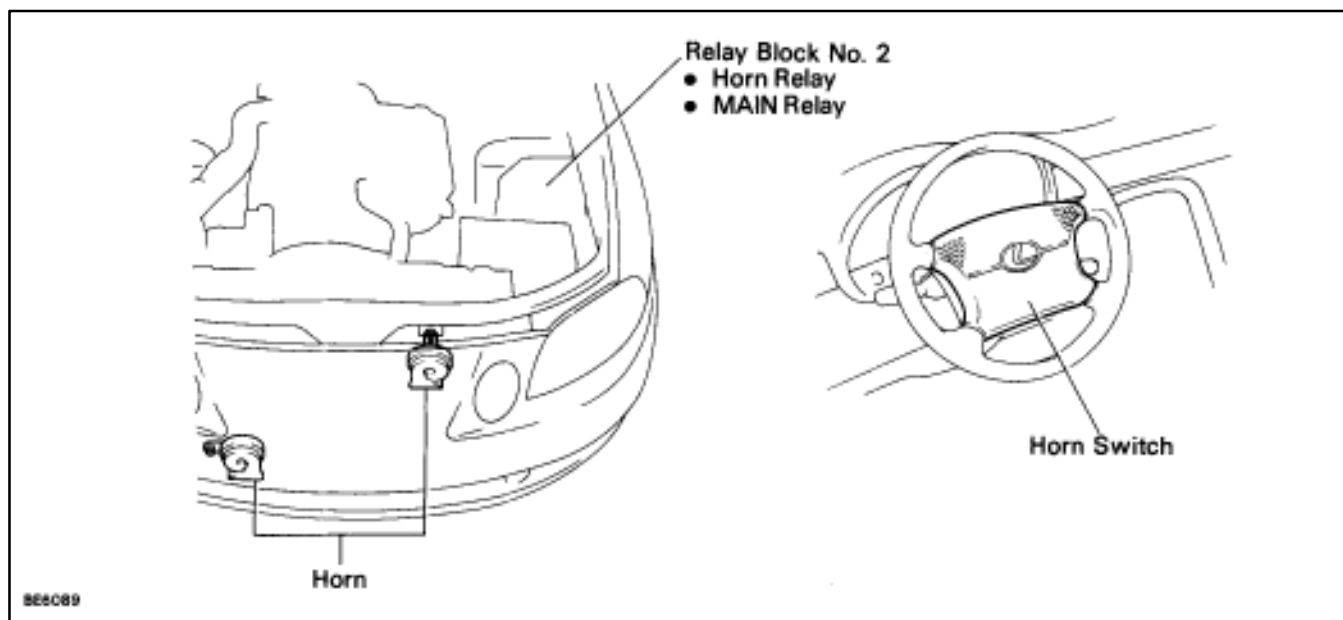

## Wiring and Connector Diagrams

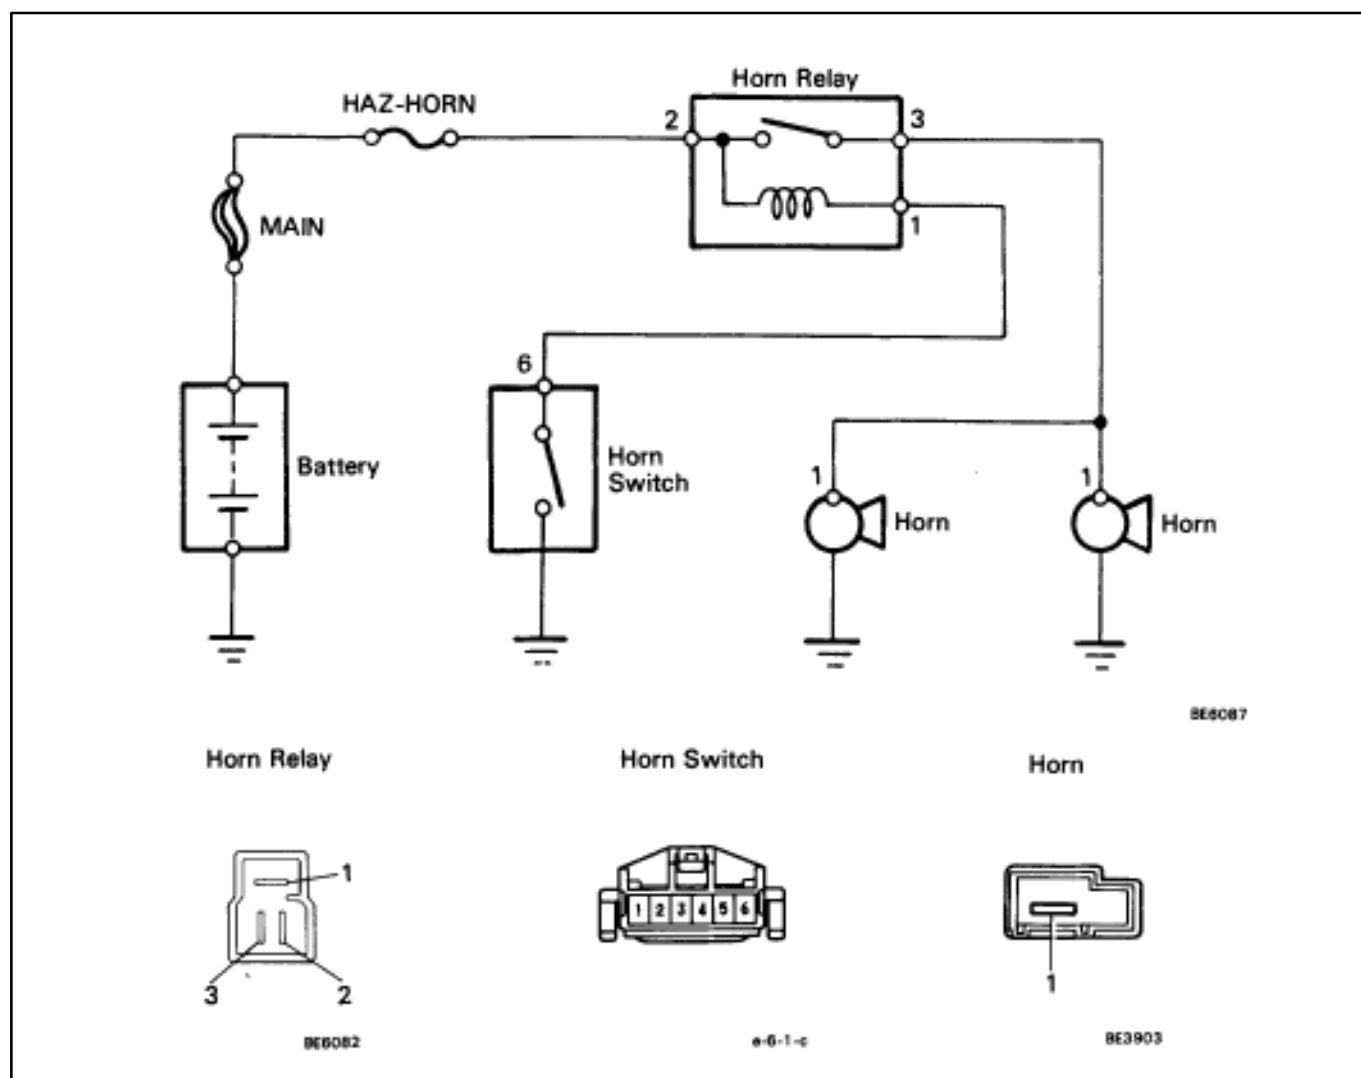

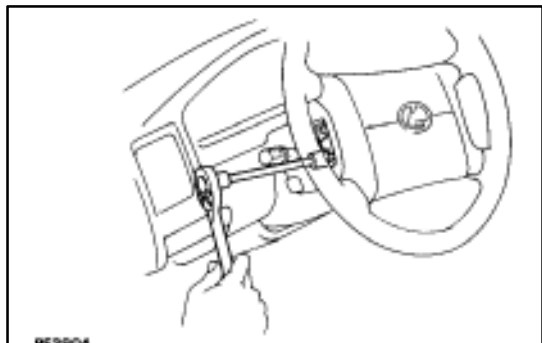



## Parts Inspection (Horn Switch) INSPECTION OF HORN SWITCH

### INSPECT HORN SWITCH

- (a) Disconnect the negative (–) terminal from the battery.
- (b) Remove the left and right covers from the steering wheel.
- (c) Using a torx wrench, loosen the four bolts.
- (d) Pull up the horn pad and place it on the steering column as shown.


HINT: Do not disconnect the connector from the horn pad.

- (e) Disconnect the connector from the slip ring.

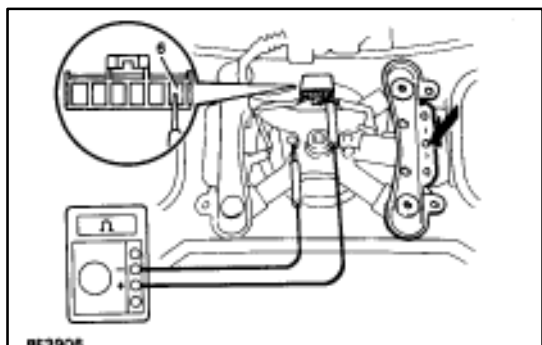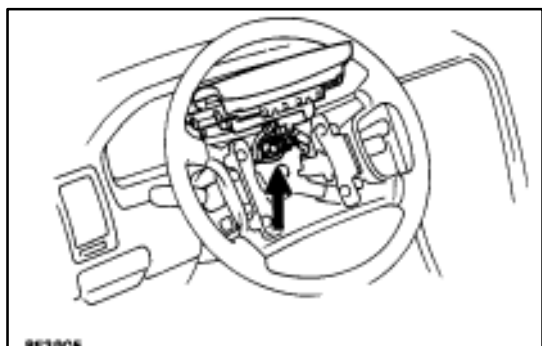

- (f) Check that there is no continuity between terminal 6 of the connector and body ground.
- (g) Check that there is continuity between terminal 6 of the connector and body ground when the horn contact plate is pressed against the steering spoke assembly.


If continuity is not as specified, repair or replace the steering wheel or wire harness as necessary.

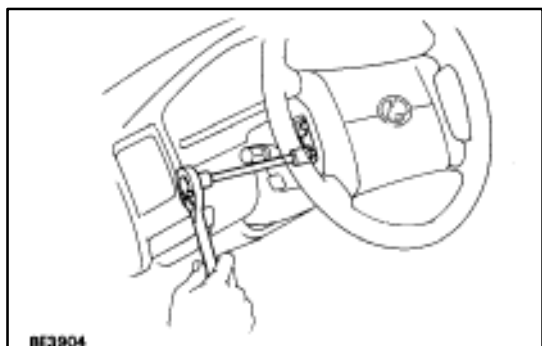

- (h) Install the horn pad in place and using a torx wrench, tighten the four bolts.

**Torque: 7.1 N·m (72 kgf·cm, 62 in.·lbf)**

- (i) Install the left and right covers.
- (j) Connect the negative (–) terminal to the battery.

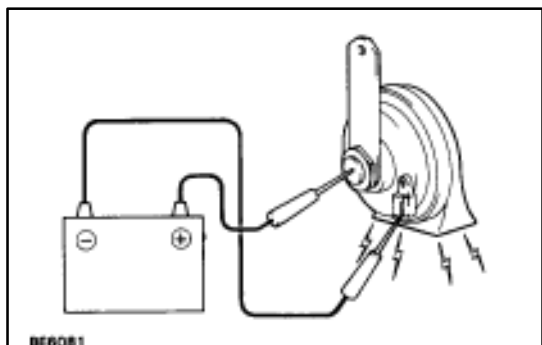



## (Horn) INSPECTION OF HORN

### INSPECT HORN OPERATION



Connect the positive (+) lead from the battery to the terminal and negative (–) lead to the horn body and check that the horn blows.

If operation is not as specified, replace the horn.

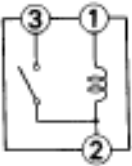(Horn Relay)  
INSPECTION OF HORN RELAY  
INSPECT RELAY CONTINUITY AND OPERATION



BE6082 BE2505

Terminal	1	2	3
Condition			
Constant			
Apply battery voltage to terminals 1 and 2.			
			

If operation is not as specified, replace the relay.

Troubleshooting

You will find the cause of trouble more easily by properly using the table shown below. In this table, the numbers indicate the order of priority of the causes of trouble. Check each part in the order shown. If necessary, replace these part.

See page	BE-4, 23	BE-26 4	BE-26 3	BE-26 3	-
Part name					
Trouble	HAZ-HORN Fuse	Horn Relay	Horn Switch	Horn	Wire Harness
Horn system does not operate	1	2	3	4	5
Horns blow all the time		1	2		3
One horn operates but other horn does not operate				1	2
Horns operate abnormally		1		2	3