

Connector Diagrams

Ignition Switch



eq 11-2

- Light Control Switch
- Dimmer Switch

Connector "B" Connector "A"




BE6218

Door Courtesy Switch
(in Door Lock Assembly)


le-6-2-C

Headlight Relay

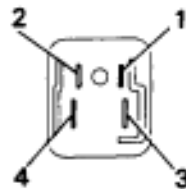

BE1838


Tailight Relay

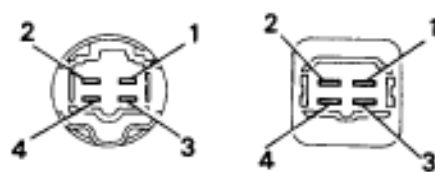

BE1647

BE1575

Headlight Dimmer Relay

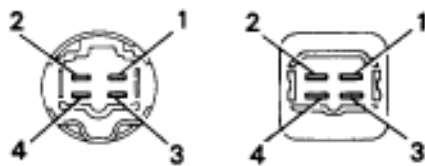

BE1647

BE1575

 
Parking Brake Switch



a-1-2

Ignition Relay

Connector "A"




BE6219

Connector "B"



(USA)

 BE6091



(Canada)

BE6220