

Troubleshooting (Headlight/U.S.A.)

See page	BE-4, 21	BE-48	BE-48	BE-46	BE-46	BE-49	BE-79	BE-4, 21	BE-4, 21	BE-4, 21	BE-4, 21	BE-4, 20	BE-6	-	-
Part name															
Trouble															
Headlight does not light. (Tailight is normal.)	1	2	4	5	3								7	6	
Headlight does not light. (Tailight does not light.)				1	2									3	
Only one side light does not light.													1	2	
“LO-Beam” does not light.															
“Hi-Beam” does not light.															
“Flash” does not light.					1										
“Auto Turn-Off System” does not operate.							1	4				2		3	
Headlight does not light with light control SW in HEAD				2		1								3	
Headlight does not go out with light control SW in OFF		1												2	
Tailight does not light with light control SW in TAIL				2										3	*1
Tailight does not go out with light control SW in OFF				2										3	*1

*1: Tailight Control Relay

(Headlight/CANADA)

See page	Part name															
Trouble																
Headlight does not light. (Taillight is normal.)	1	2	5	6	4	3									8	7
Headlight does not light. (Taillight does not light.)				1		2										3
Only one side light does not light.															1	2
"LO-Beam" does not light.	All		1		2	3										4
	One side											1			2	3
	All		1		2	3							1		2	4
"Hi-Beam" does not light.	One side											1		1	2	3
"Flash" does not light.					1	2										3
"Auto Turn-Off System" does not operate.						1	4							2		3
Headlight does not light with light control SW in HEAD				2		1										3
Headlight does not go out with light control SW in OFF		1				2										3
Taillight does not light with light control SW in TAIL					2	3										*1
Taillight does not go out with light control SW in OFF					3	2										*1
Headlight and Taillight do not light with engine running and light control SW in OFF						2								1		*3
							5									4

*1: Taillight Control Relay

*2: Alternator L Terminal