

(ILLUMINATION LIGHT SYSTEM)

Description

The component parts of this system and their function are described in the following table.

Parts Name	Function
Rheostat Light Control Volume	In order to adjust the degree of illumination light, the resistance value of the built-in variable resistor is sent to the combination meter and rheostat light control.
Integration Relay (Daytime Running Light Relay: Canada)	During daytime running light operation this prevents current flow to the rheostat light control to stop each illumination from lighting up. When the light control switch is at TAIL or HEAD, current is sent to the rheostat light control.

Parts Location

