

Troubleshooting Illumination Light System

You will find the cause of trouble more easily using the table shown below. In this table, the numbers indicate the order priority of the causes in trouble. Check each part in the order shown. If necessary, replace the parts.

See page		BE-20, 57	BE-4, 20	BE-71	BE-49	BE-103	BE-74	BE-6	-	-
Part name		Taillight Control Relay	PANEL Fuse	Rheostat Light Control Volume	Integration Relay (CANADA)	Combination Meter Assembly	Glove Box Light Switch	Bulb	Wire Harness	Other parts
Illumination lights do not light. (Taillight is normal.)	USA		1						2	
	CANADA		1		2				3	
Illumination lights do not light. (Taillight does not light.)	USA	1	4						3	*2
	CANADA	1	4		5				3	*2
Illumination lights with adjustable brightness do not light.				1					2	
Only one light does not light.								1	2	
Brightness does not changes when rheostat volume is turned.	All (See pages BE-72)			1					2	
	Only Com- bination Meter					1			2	
Glove box light does not light.							1	2	3	

*: Inspect Taillight System