

## Troubleshooting Interior Light System

You will find the cause of trouble more easily using the table shown below. In this table, the numbers indicate the order priority of the cause in trouble. Check each part in the order shown. If necessary, replace the parts.

See page	BE-41, 2	BE-79	BE-49	BE-80	BE-81	BE-82	-	BE-6
Part name								
Trouble	DOME Fuse Door Courtesy Switch Integration Relay Front Personal Light Vanity Light Luggage Compartment Door Courtesy Switch Wire Harness Bulb							
Only one interior light does not light up.							2	1
Interior light does not light up. (All)	1						2	
"Illuminated Entry System" does not operate.		2	1				3	
Interior light does not light up. (in front personal light)				2			3	1
Front personal light does not light up.				2			3	1
Rear personal light does not light up.							2	1
Vanity light does not light up.					2		3	1
Luggage compartment light does not light up.						2	3	1
Courtesy light does not light up.		2					3	1