
 


Wiring and Connector Diagrams

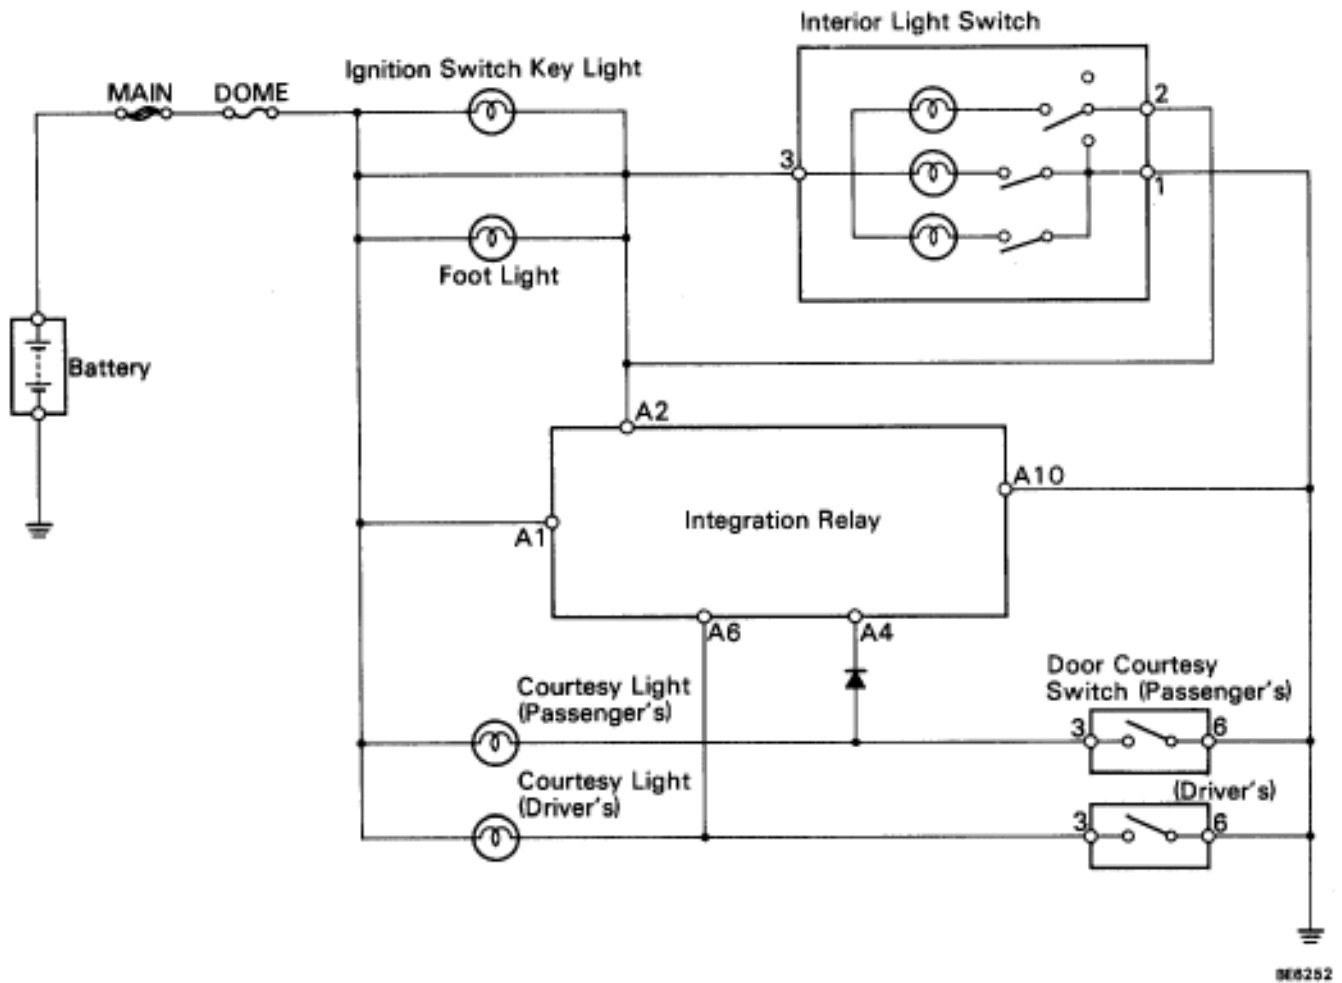

Integration Relay

Connector "A"



BE6219


Connector "B"



(USA)

BE6091

 Connector "B"



(Canada)

BE6220

Courtesy Switch (Luggage Compartment)



a-1-1

Door Courtesy Switch (in Door Lock Assembly)



1a-6-2-C

Interior Light and Front



B-3-2-0

Vanity Light



6A-2-2-C