
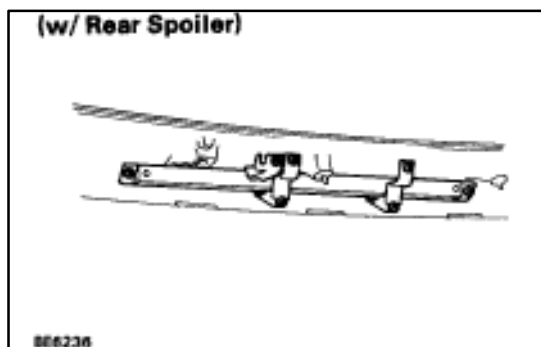


## Parts Replacement (Rear Combination Light)

(See page [BE-56](#))

## (High Mount Stop Light)

### REPLACEMENT OF HIGH MOUNT STOP LIGHT

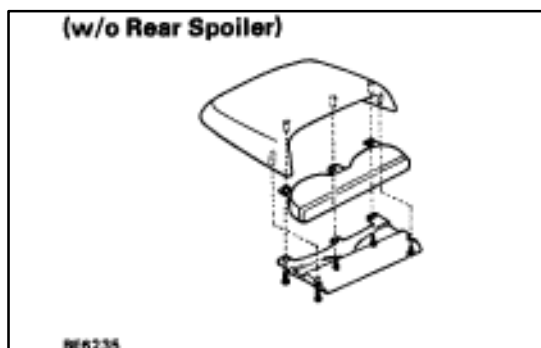

#### 1. REMOVE HIGH MOUNT STOP LIGHT

- (a) Disconnect negative (–) terminal from the battery.

**CAUTION:** Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and negative (–) terminal cable is disconnected from the battery.

**(w/o Rear Spoiler)**

- (b) Separate the woofer speaker cover from package tray trim.  
(c) Disconnect connector.  
(d) Remove woofer speaker cover.  
(e) Remove five screws and separate the high mount stop light from woofer speaker cover.

**(w/Rear Spoiler)**

- (f) Separate the rear spoiler from the luggage door. (See page [BO-106](#))  
(g) Remove three screws and separate the high mount stop light from rear spoiler.

#### 2. INSTALL HIGH MOUNT STOP LIGHT

For installation, follow the removal procedure in reverse.

## Parts Inspection (Stop Light Switch)

### REMOVAL AND INSTALLATION OF STOP LIGHT SWITCH

#### 1. REMOVE STOP LIGHT SWITCH

- (a) Remove instrument panel subassembly cover under No. 1 and brake pedal return spring.  
(b) Disconnect connector.  
(c) Remove a nut and switch.

#### 2. ADJUSTMENT OF STOP LIGHT SWITCH

(See page on page [BR-4](#))

#### 3. INSTALL STOP LIGHT SWITCH

For installation, follow the removal procedure in reverse.

