

## Troubleshooting

### Stop Light System

You will find the cause of trouble more easily using the table shown. In this table, the numbers indicate the order priority of the causes in trouble. Check each part in the order shown. If necessary, replace the parts.

See page	BE-4, 20	BE-61	BE-62	-	BE-6
Part name					
Trouble	STOP Fuse	Stop Light Switch	Light Failure Sensor	Wire Harness	Bulb
Stop light does not light up.	1	2	3	4	
Stop light always lights up.		1		2	
Only one light always lights up.				1	
Only one light does not light.				2	1