

Parts Inspection (Combination Switch Assembly)

(See page [BE-46](#))

HINT: Inspect light control switch.

(Taillight Control Relay)

REMOVAL AND INSTALLATION OF TAILLIGHT CONTROL RELAY


(See page [BE-16](#))

INSPECTION OF TAILLIGHT CONTROL RELAY

INSPECT TAILLIGHT CONTROL RELAY

(Continuity)

Inspect relay continuity between terminals.

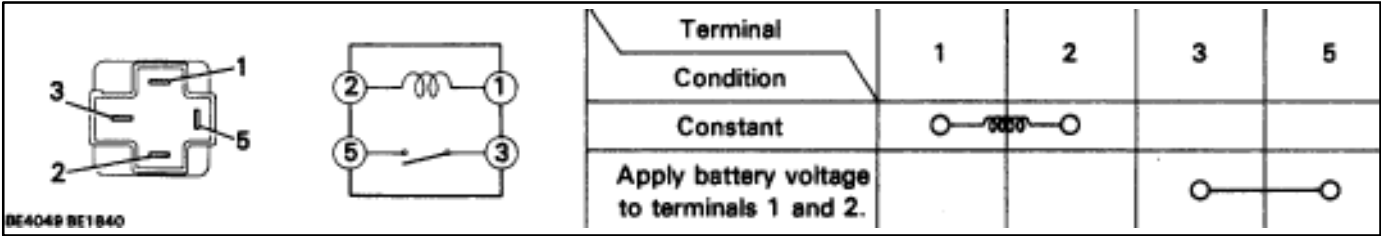

If continuity is not as specified, replace the relay.

(Relay Circuit)

(See page [BE-20](#))