

(TAILLIGHT SYSTEM)

Description

The component parts of this system and their function are as shown in the following table.

Parts Name	Function
Light Control Switch	Grounds current from the taillight control relay via the integration relay, switching each relay and supplying current to the appropriate bulbs accordance with the switch position.
Taillight Control Relay	Turned on by signals from the light control switch and supplies current to each bulb.
Integration Relay	Carries out "Light Auto Turn-Off" of the headlights, fog lights and taillights and cuts off current to the light control switch in accordance with signals from the GAUGE fuse and door courtesy switch.
Light Failure Sensor	This sensor senses when a bulb in rear combination light is burnt out and lights up a warning light.
Integration Relay (Daytime Running Light Relay: CANADA)	Refer to BE-30 .

Parts Location

