


## Parts Replacement

### (Clearance Light)

#### REPLACEMENT OF CLEARANCE LIGHT

(See page [BE-37](#))

HINT: Replacement of Headlight (LO-Beam).

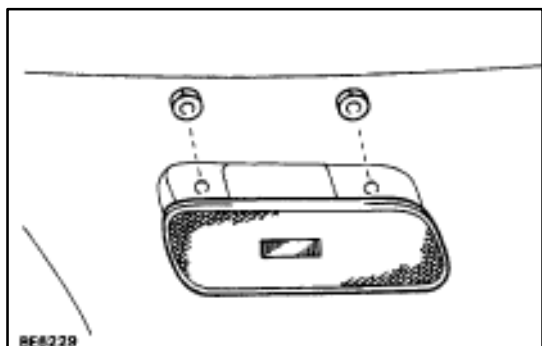

### (Front Side Marker Light)

#### REPLACEMENT OF FRONT SIDE MARKER LIGHT

##### 1. REMOVE FRONT SIDE MARKER LIGHT

(a) Disconnect negative (–) terminal from the battery.

**CAUTION:** Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and negative (–) terminal cable is disconnected from the battery.

(b) Remove two nuts.

(c) Remove front side marker light from bumper.

(d) Disconnect connector.

##### 2. INSTALL FRONT SIDE MARKER LIGHT

For installation, follow the removal procedure in reverse.

### (Light Failure Sensor)

(See page [BE-62](#))

### (Integration Relay)

(See page [BE-49](#))


## (Rear Combination Assembly)

#### REPLACEMENT OF REAR COMBINATION LIGHT ASSEMBLY

##### 1. REMOVE REAR COMBINATION LIGHT ASSEMBLY

(a) Disconnect negative (–) terminal from the battery.

**CAUTION:** Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and negative (–) terminal cable is disconnected from the battery.

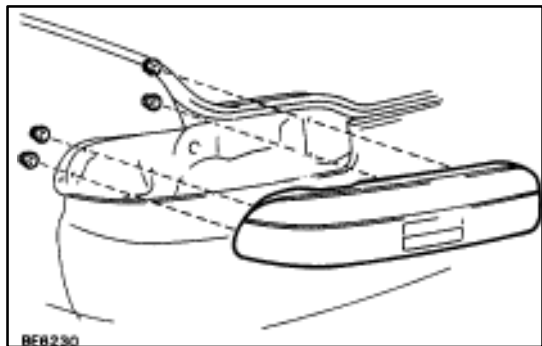

- (b) Remove the luggage compartment door trim.
- (c) Disconnect connector.
- (d) Remove four nuts and rear combination light assembly.

## 2. INSTALL REAR COMBINATION LIGHT ASSEMBLY


Follow the removal procedure in reverse to carry out installation.

## (License Plate Light)

## REPLACEMENT OF LICENSE PLATE LIGHT

### 1. REMOVE LICENSE PLATE LIGHT

- (a) Disconnect negative (–) terminal from the battery.  
**CAUTION: Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and negative (–) terminal cable is disconnected from the battery.**
- (b) Remove the rear bumper.
- (c) Disconnect connector.
- (d) Remove three screws and the license plate light.

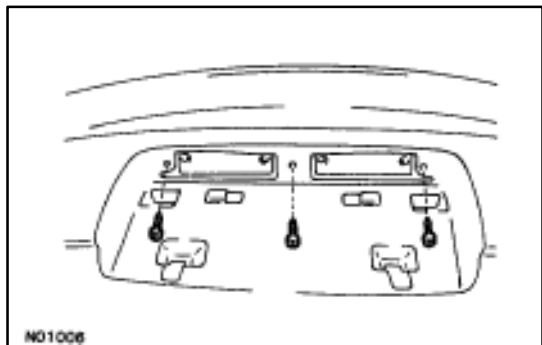

### 2. INSTALL LICENSE PLATE LIGHT

Follow the removal procedure in reverse to carry out installation.