

Troubleshooting

Taillight System

You will find the cause of troubles more easily using the table well shown below. In this table, the numbers indicate the order priority of the causes in troubles. Check each part in the order shown. If necessary, replace the parts.

See page		BE-4, 20	BE-20, 57	BE-46	BE-49	BE-62	BE-79	BE-4, 20	-	BE-6	
Part name		TAIL Fuse	Taillight Control Relay	Light Control Switch	Integration Relay	Light Failure Sensor	Door Courtesy Switch	GAUGE Fuse	Wire Harness	Bulb	Other Parts
Trouble											
USA	Taillight does not light. (Headlight does not lights.)			1	2				3		
	Taillight does not light. (Headlight is normal.)	1	2	3	4				5		
	Only one light does not light.(Taillight)								2	1	
	Rear combination light does not light.					2			1	3	
	"Light Auto Turn-Off System" does not operate.				1		4	3	2		
CANADA	Taillight does not light. (Headlight does not lights.)			1	2				3		
	Taillight does not light. (Headlight is normal.)	1	2	4	3				5		
	Only one light does not light. (Taillight)								2	1	
	Rear combination light does not light.					2			1	3	
	"Light Auto Turn-Off System" does not operate.				1		4	2	3		
	Taillight does not light with light control SW in TAIL.		1	2	3						
	Taillight does not go out with light control SW in OFF.		1	3	2				4		
	Headlight and Taillight do not light with engine running and light control SW in OFF.				2			1	3		*14